

Thank you for your interest in our schematics. The schematic is available on the next page.


If you want to download additional parts of a schematic, or additional schematics, these must be requested individually.

To provide you with this information, more than 6000 members work regularly on the content of Radiomuseum.org.

As a member, you can access schematics, large images without watermarks and collector's prices. You will also surf at Radiomuseum.org without advertising. To do so, you may support Radiomuseum.org with a one-time membership fee of 20 € or 30 CHF or 25 US \$. We would be delighted if you joined as a member:


https://www.radiomuseum.org/dsp_anmelden_start.cfm

These books might be of interest of you:

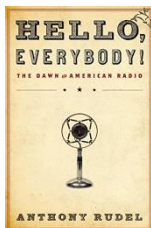


Hello, Everybody! The Dawn of American Radio

Long before the Internet, another young technology was transforming the way we connect with the world. At the dawn of the twentieth century, radio grew from an obscure hobby into a mass medium with the power to reach millions of people.

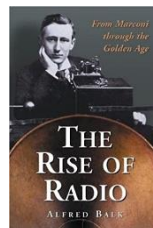

The Rise of Radio, from Marconi through the Golden Age


As the dominant form of electronic mass communication in the United States from the 1930s into the 1950s, radio helped to forge a modern continental nation. It fused myriad subcultures heavily rural, ethnic, and immigrant into a national identity, unifying the nation in the face of the Depression and war.

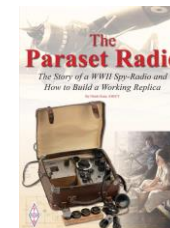

The Paraset Radio: The Story of a WWII Spy-Radio and How to Build a Working Replica

This book describes the gripping story behind the Paraset – a unique spy-radio, dropped behind enemy lines in the dark days of WWII. This radio being both light weight and state of the art for the time was concealed in a suitcase, making ideal for use by the spies of SOE.

Click [here](#) for further information.

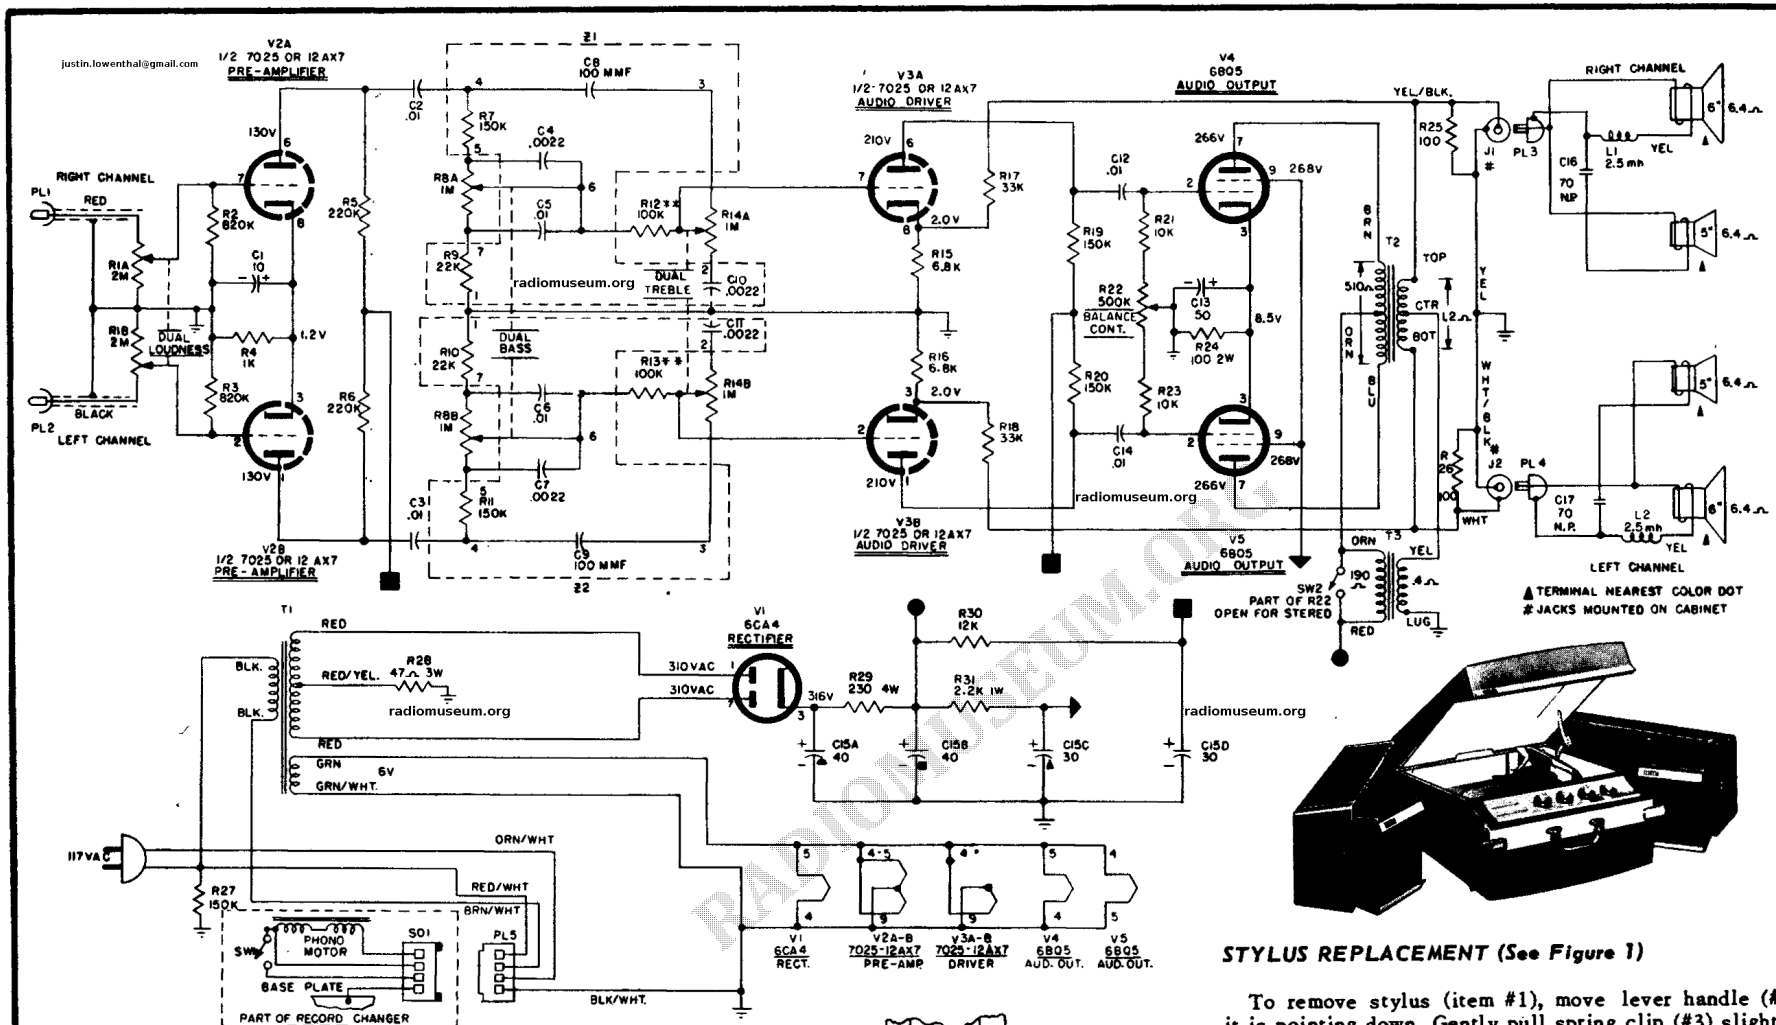

- NOTES:
1. ALL CAPACITANCE VALUES ARE IN MFD, ALL RESISTANCE VALUES ARE IN OHMS 1/2 WATT UNLESS OTHERWISE SPECIFIED.
 2. D.C. VOLTAGES MEASURED FROM POINTS INDICATED TO CHASSIS GROUND - NO SIGNAL APPLIED, USING A V.T.V.M., LINE VOLTAGE SET AT 117 VAC.
 3. REAR SECTIONS OF ALL CONTROLS ARE THE RIGHT CHANNEL.
 4. ALL AMPLOK CONNECTORS VIEWED FROM CONTACT END.
 5. ** R12 & R13 ARE NOT INCLUDED IN Z1 OR Z2.
 6. N.P. - NON POLARIZED.

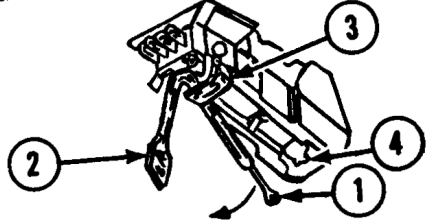


Figure 1
 Stylus removal and replacement.


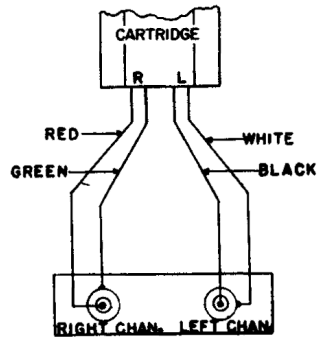


Figure 2 - Cartridge terminal wiring.

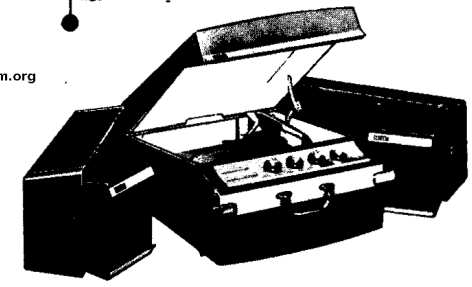

STYLUS REPLACEMENT (See Figure 1)

To remove stylus (item #1), move lever handle (#2) until it is pointing down. Gently pull spring clip (#3) slightly open with finger. Grasp stylus by lever handle and slip it out from under clip. To replace stylus, slip heel of stylus under clip. Gently pull clip slightly open with finger. Slip stylus under clip making certain that stylus shaft rests in center of coupler (#4).

CARTRIDGE REPLACEMENT

Write down the sequence of colored wires connecting to the four terminals at rear of cartridge. Remove the mounting screws securing the cartridge in the tone arm. Remove the push-on connectors from the cartridge terminals. Push the connectors onto the terminals of the replacement cartridge with the wire-colors in the sequence previously noted for the original cartridge.