



Operation / Instruction:

1. When the pedal switch is NOT connected, the cabinet mounted switch controls the relay function.
2. When the pedal switch IS CONNECTED, the cabinet switch should be in the PEDAL position for correct operation.
3. With the pedal switch mounted and the cabinet switch in the PEDAL position, the RELAY and the GREEN LED are energized when the footswitch is in the "on" position.
4. When the footswitch is in the "OFF" position, the RED LED is energized and the RELAY is NOT energized.
5. Incorrect operation -- IF the pedal is mounted AND the cabinet switch is in the "Manual" position, the RELAY is energized. The LEDs will NOT be lit in either footswitch position. This is a FEATURE, not a bug.

ACKNOWLEDGEMENT:

Schematic is adapted from Martin Manning's Overdrive Special Eyelet Boards series 2021/03/25.

Adaped Footswitch Logic

A C He1d

Rev 2

2022-06-22