

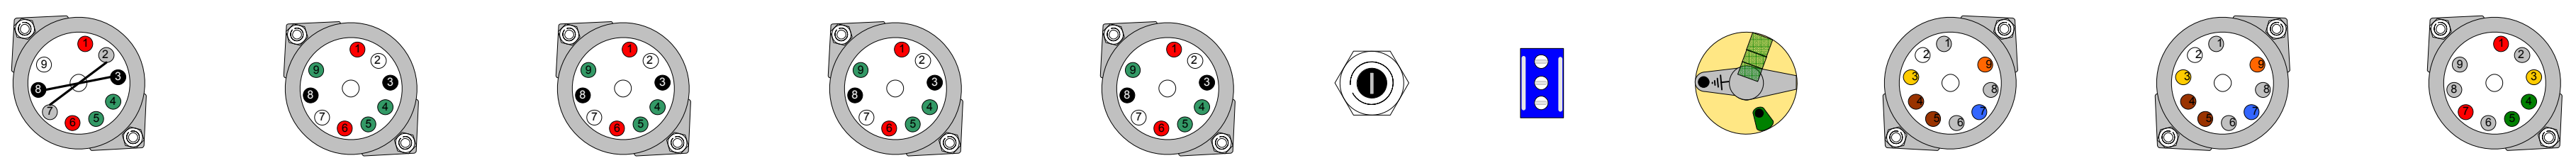


Speed SW1    Vib Trem SW3    Volume CH I VR2    Volume CH II VR1    Brilliance SW5    Top Cut VR3    Standby    Pilot    Mains

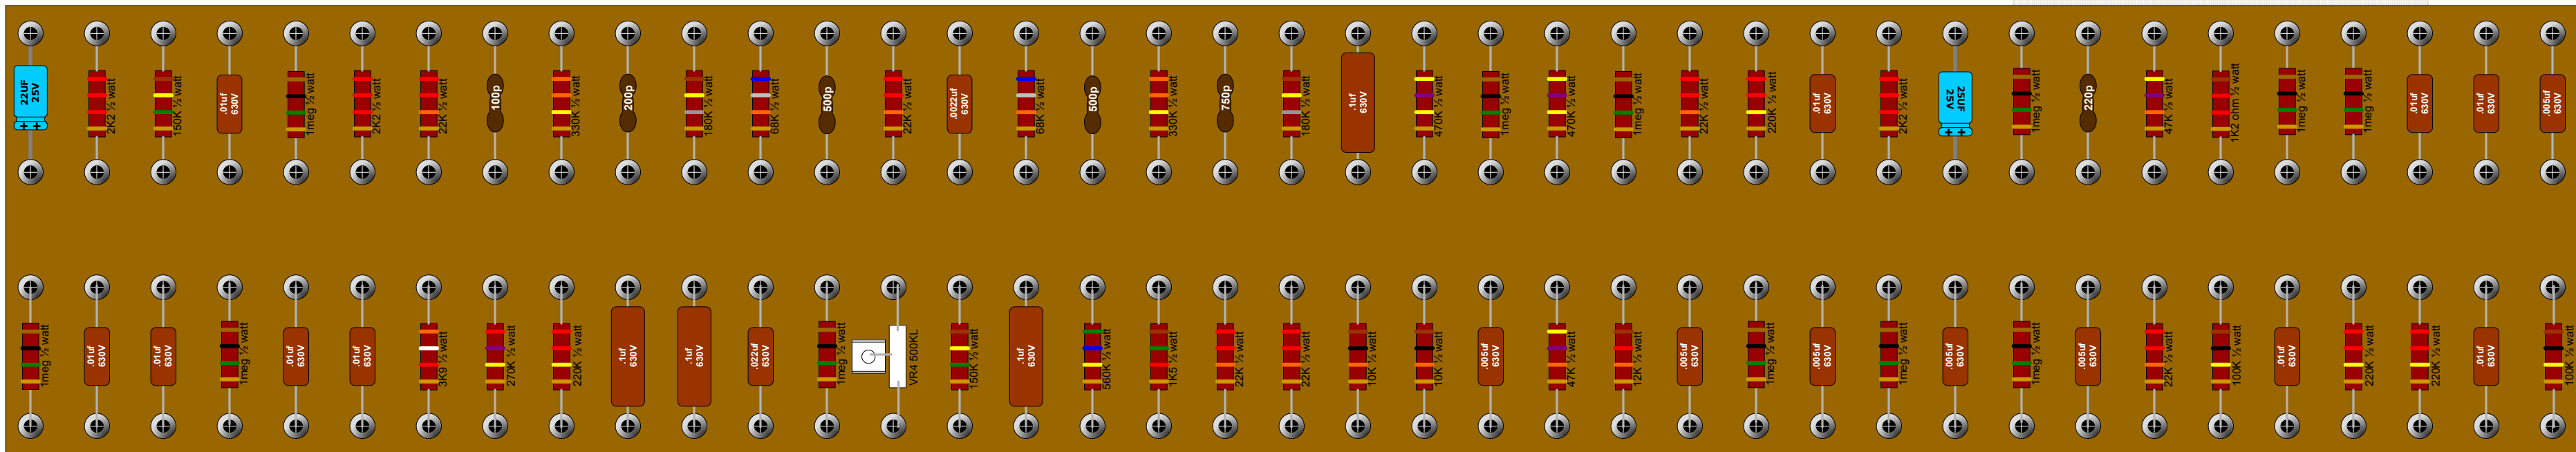

V1 EF86    V5 12AX7    V2 12AX7    V6 12AU7    V7 12AX7    Foot Switch    8/16 Ohms    Speaker Out Jack    V3 EL84    V3 EL84    V8 EZ81

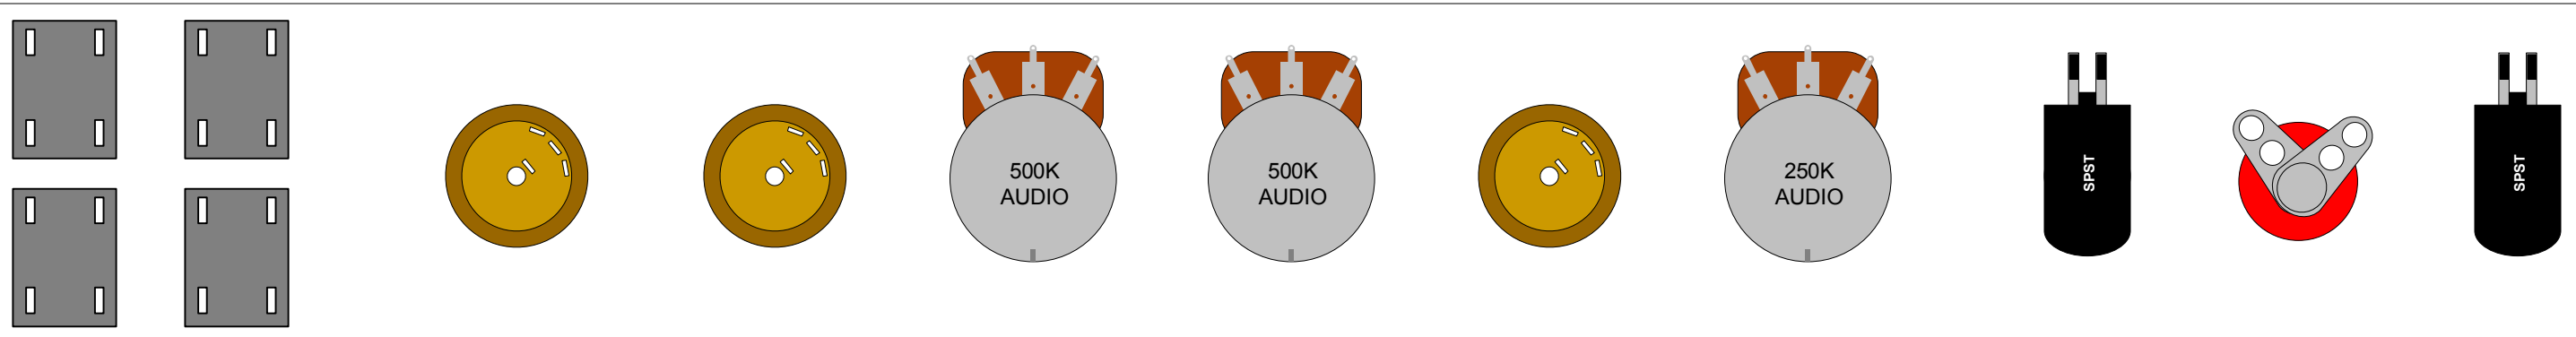