

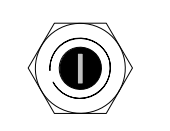
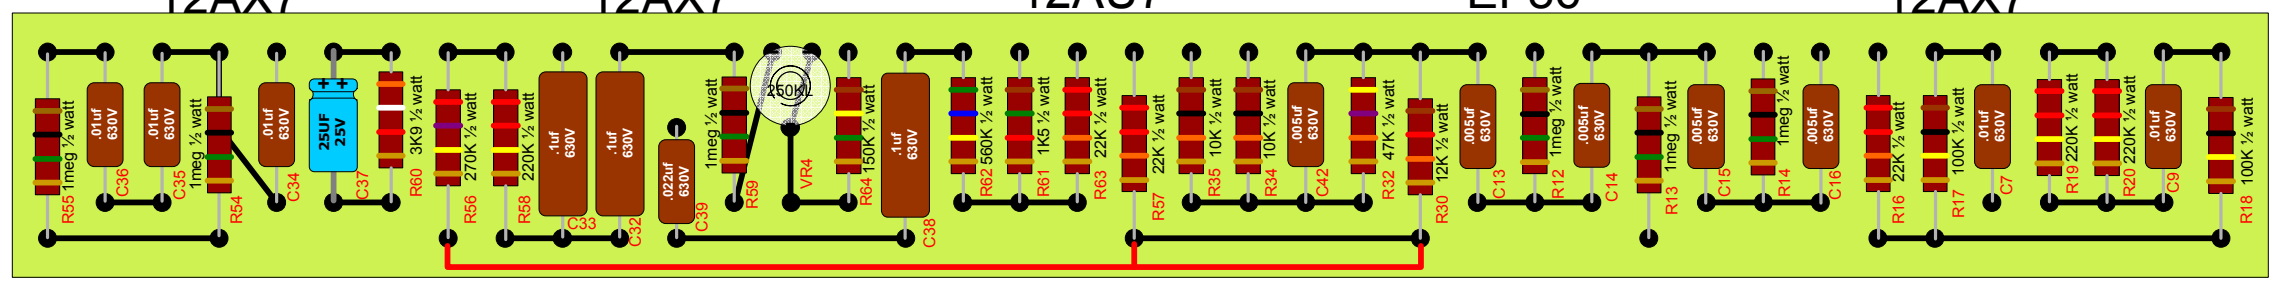
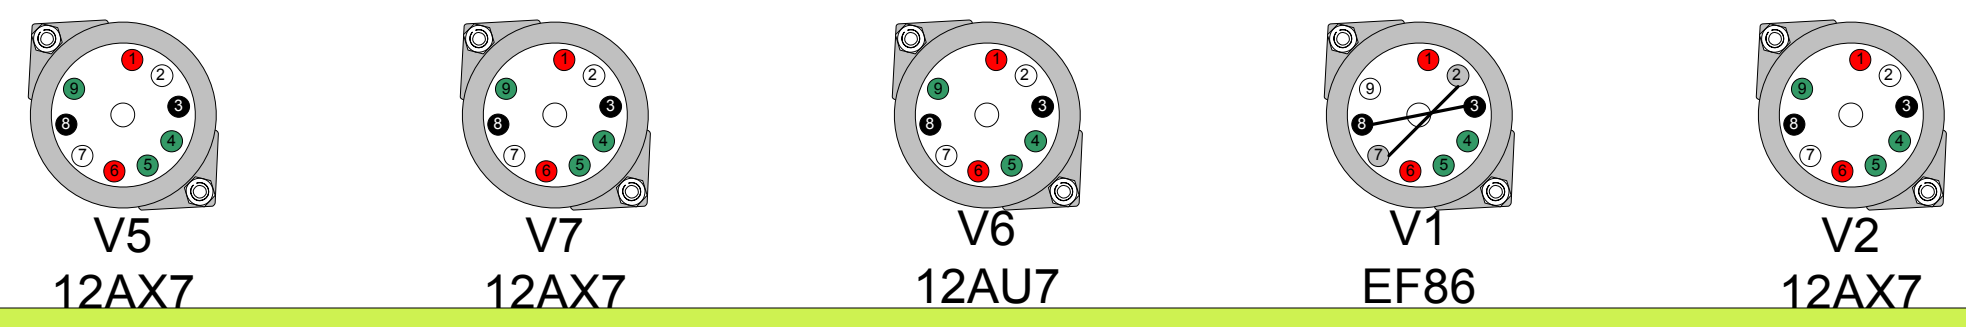
 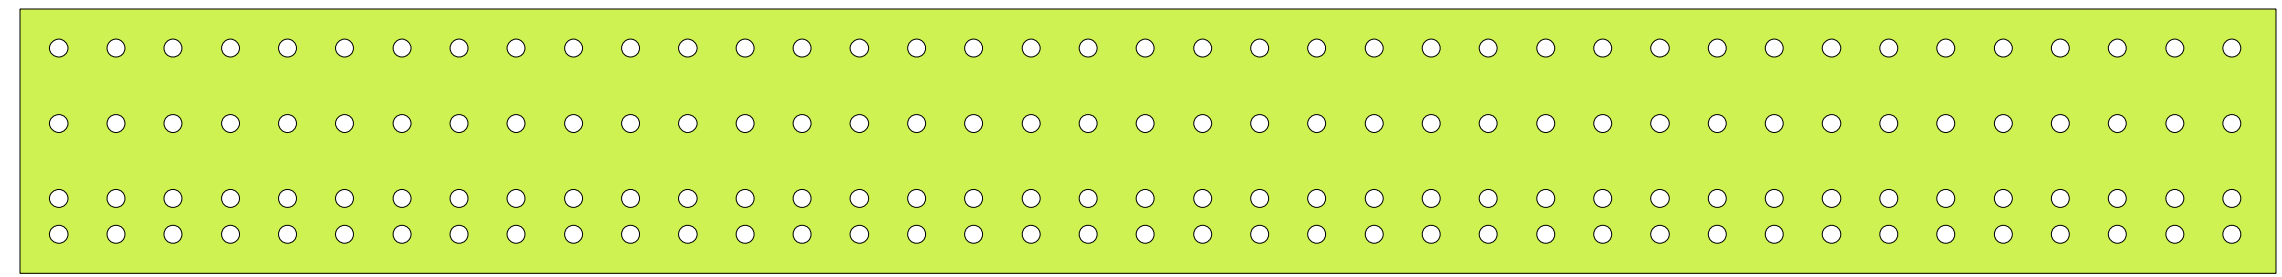



Speed SW1    Vib Trem SW3    Volume CH I VR2    Volume CH II VR1    Brilliance SW5    Top Cut VR3    Standby    Pilot    Mains

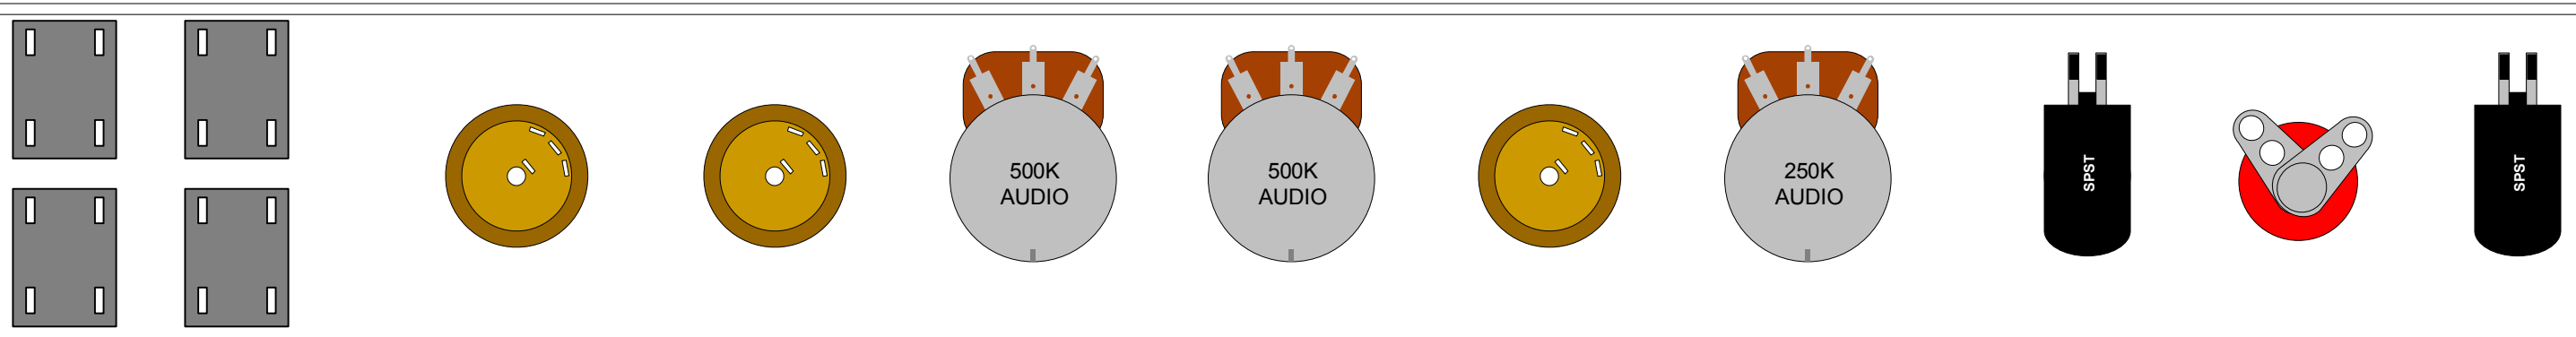


Foot Switch




8/16 Ohms

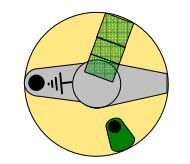


Speaker Out Jack

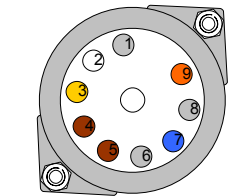

V3 EL84

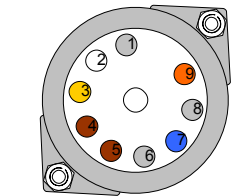

V3 EL84

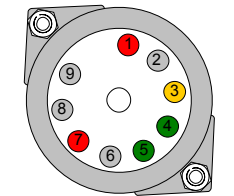

V8 EZ81