

Hoffman AB763 Deluxe Reverb Version Voltage Chart

	Normal Channel Stages 1&2	Tremolo Channel Stages 1&2	Reverb Driver	Reverb Recovery & stage 3	Tremolo Oscillator & CF Buffer	Phase Inverter	Power Pentode	Power Pentode	Rectifier
Tube Position	V1	V2	V3	V4	V5	V6	V7	V8	V9
	12AX7	12AX7	12AT7	12AX7	12AX7	12AT7	6V6GT	6V6GT	GZ34
Pin 1	213 VDC	210 VDC	438 VDC	207 VDC	216 VDC	179 VDC	22.5 VDC	22.5 VDC	
Pin 2	0 VDC	1.5 VDC	22 VDC	1.0 VDC	1.1 VDC	52 VDC	3.2VAC	3.2VAC	
Pin 3	1.4 VDC	0 VDC	9.7 VDC	1.6 VDC	2.0 VDC	83.8 VDC	445 VDC	445 VDC	
Pin 4	3.2VAC	3.2VAC	3.2VAC	3.2VAC	3.2VAC	3.2VAC	445 VDC	445 VDC	348 VAC
Pin 5	3.2VAC	3.2VAC	3.2VAC	3.2VAC	3.2VAC	3.2VAC	-42 VDC	-42 VDC	
Pin 6	201 VDC	201 VDC	438 VDC	204 VDC	205 VDC	188 VDC	-42 VDC	-42 VDC	348 VAC
Pin 7	0 VDC	0 VDC	22 VDC	7.7 VDC	7.0 VDC	54 VDC	3.2VAC	3.2VAC	
Pin 8	1.6 VDC	1.6 VDC	9.7 VDC	1.6 VDC	1.6 VDC	83.8 VDC	22.5 VDC	22.5 VDC	445 VDC
Pin 9	3.2VAC	3.2VAC	3.2VAC	3.2VAC	3.2VAC	3.2VAC			

All voltages taken with all controls set to 0
and Tremolo circuit grounded via foot switch