
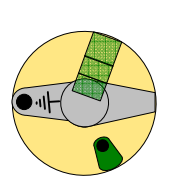
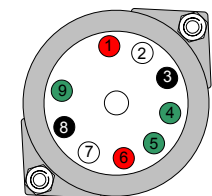
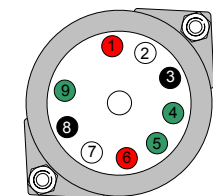
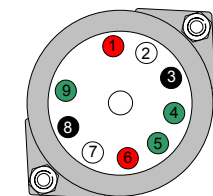
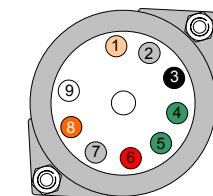
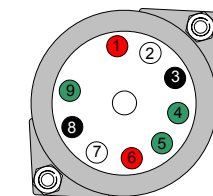
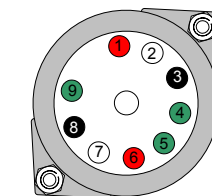
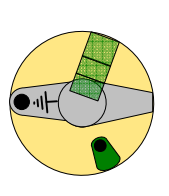
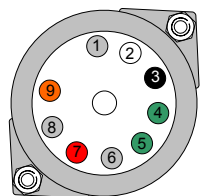
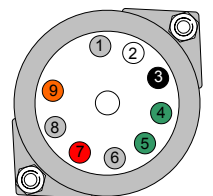
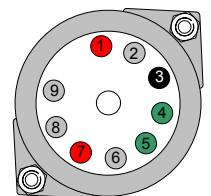
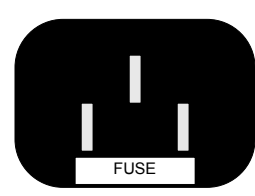
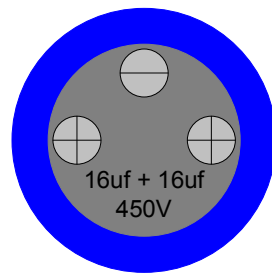
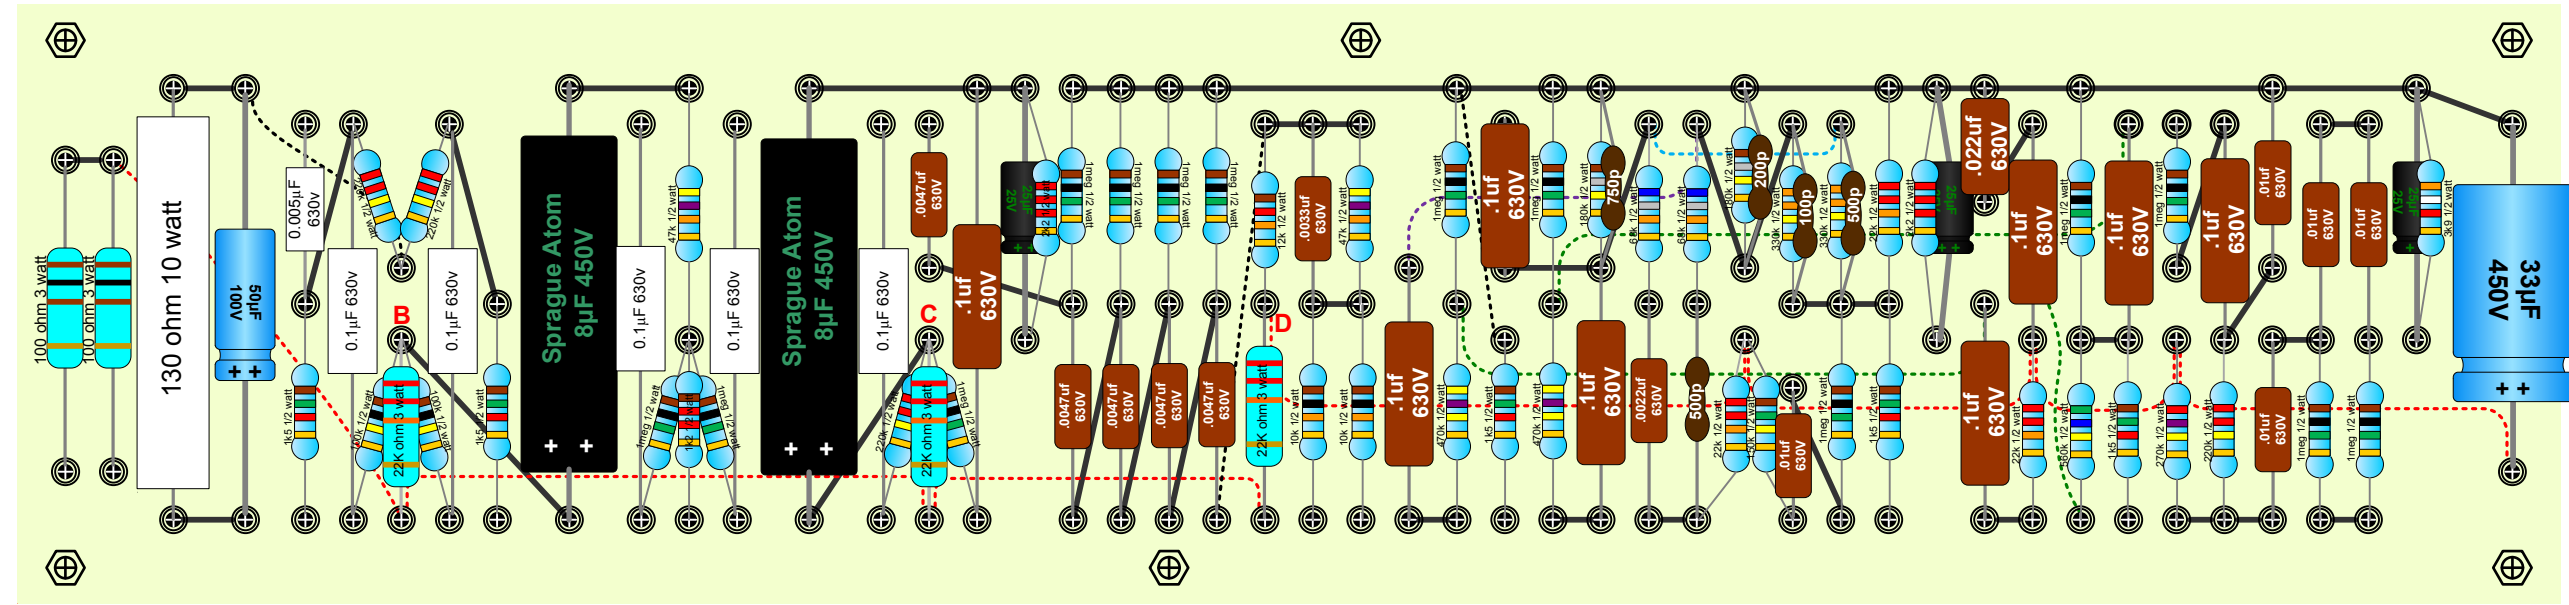


Indicator    Power    Standby    TOP CUT    VOLUME    NORMAL    VIB-TREM    BRILLIANCE    INPUT    NORMAL    VIB-TREM    VIB/TREM    DEPTH    SPEED

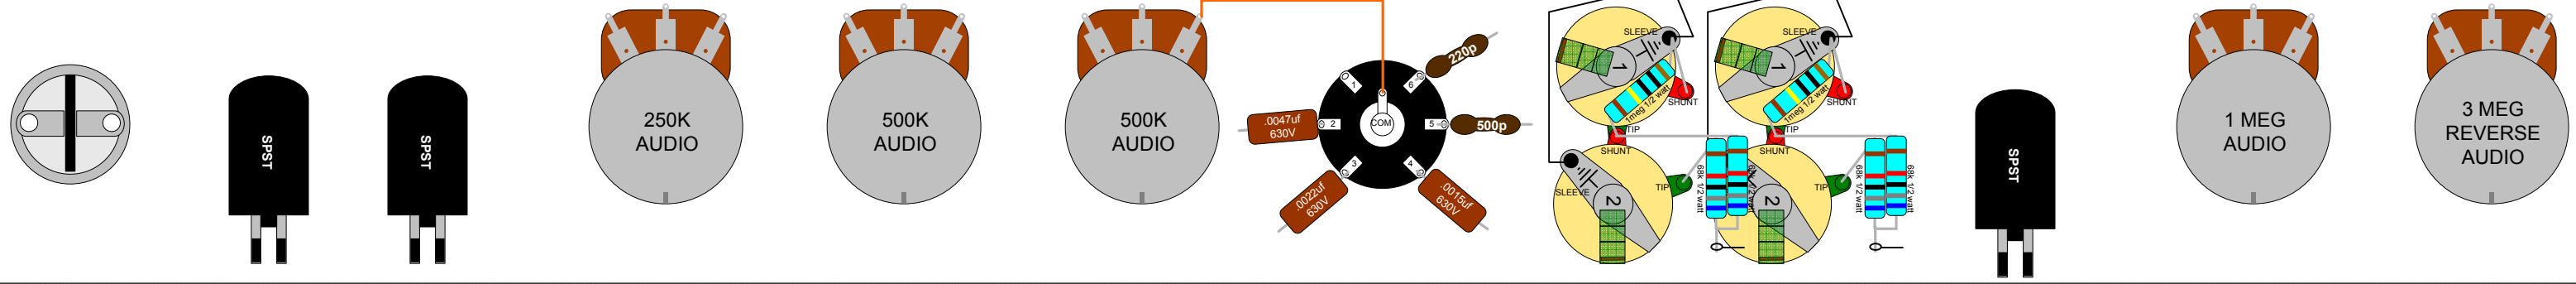

V9 EZ81

V8 EL84

V7 EL84

SPEAKER JACK

V6 12AX7

V5 12AX7

V4 EF86

V3 12AU7

V2 12AX7

V1 12AX7

Footswitch

