

Hoffman AB763 Deluxe Reverb Version Voltage Chart

	Normal Channel Stages 1&2	Tremolo Channel Stages 1&2	Reverb Driver	Reverb Recovery & stage 3	Tremolo Oscillator	Phase Inverter	Power Pentode	Power Pentode	Rectifier
Tube Position	V1	V2	V3	V4	V5	V6	V7	V8	V9
	12AX7	12AX7	12AX7	12AX7	12AX7	12AX7	6V6GT	6V6GT	GZ34
Pin 1	204VDC	204.8VDC	421VDC	179.6VDC	130-336VDC	192.8VDC			
Pin 2	VDC	VDC	0VDC	VDC	1.6-2.2VDC	47.5VDC	VAC	VAC	5.2VAC
Pin 3	1.38VDC	1.36VDC	21VDC	1.74VDC	1.5-2.2VDC	76.6VDC	436.5VDC	436.8VDC	
Pin 4	VAC	VAC	VAC	VAC	VAC	VAC	435.7VDC	436VDC	691VAC
Pin 5	VAC	VAC	VAC	VAC	VAC	VAC	-39.8VDC	-39.8VDC	
Pin 6	196.6VDC	198VDC	421VDC	203.7VDC	438VDC	196VDC	VDC	VDC	691VAC
Pin 7	VDC	VDC	VDC	VDC	130-336VDC	51.2VDC	VAC	VAC	
Pin 8	1.23VDC	1.46VDC	21VDC	1.37VDC	140-323VDC	76.6VDC			441VDC
Pin 9	VAC	VAC	VAC	VAC	VAC	VAC			