



Drawn By Steve Luckey 02/16/2015

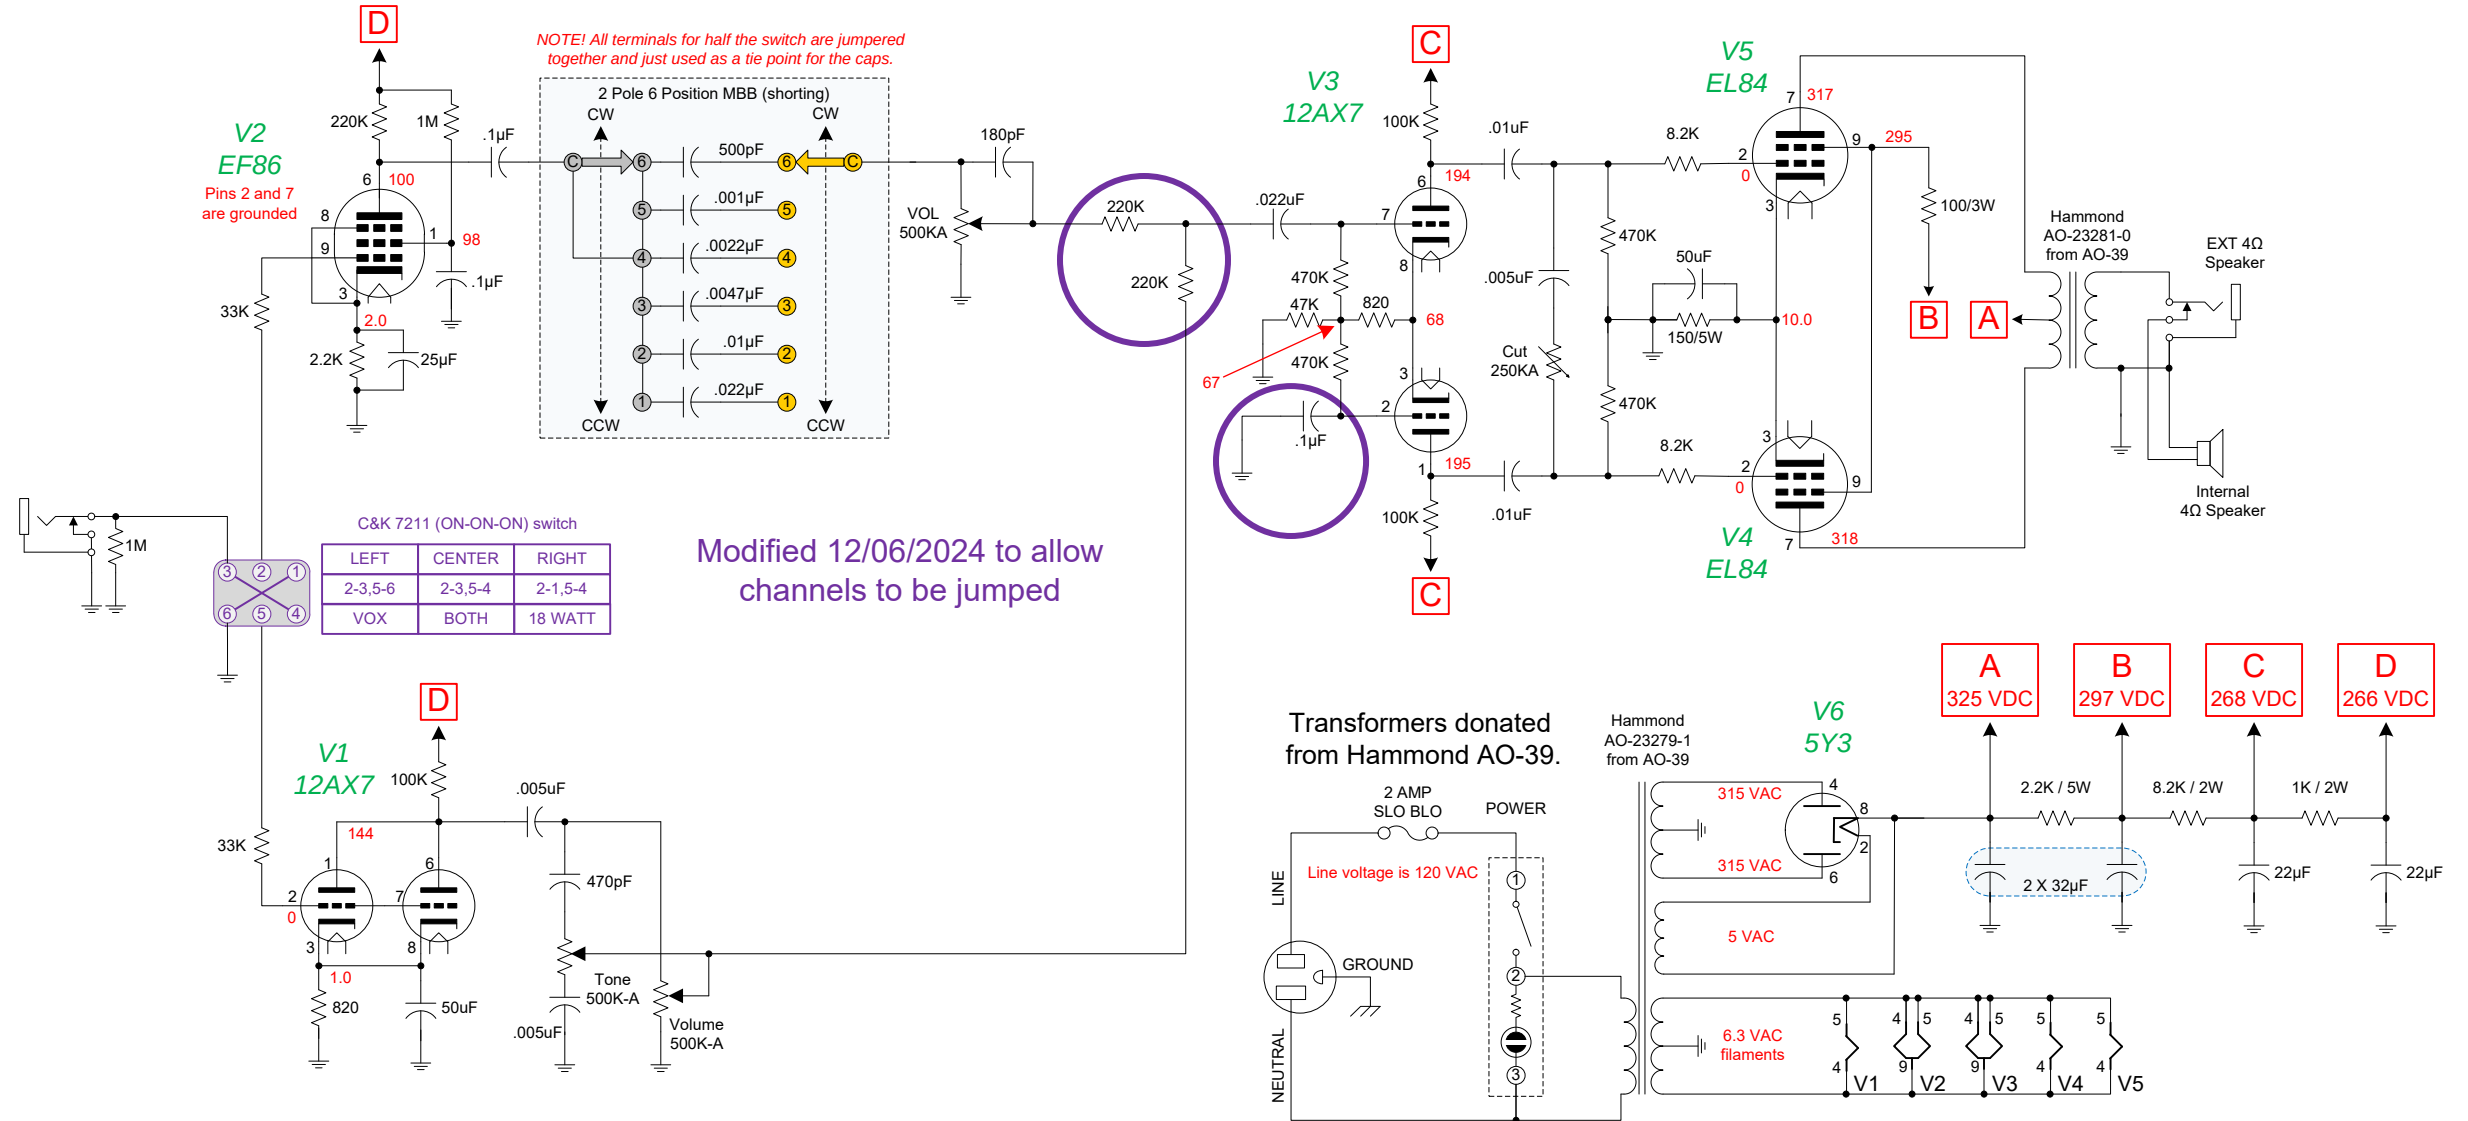


BRITISH DUAL LITE (rev 1) *Layout by Steve Luckey*

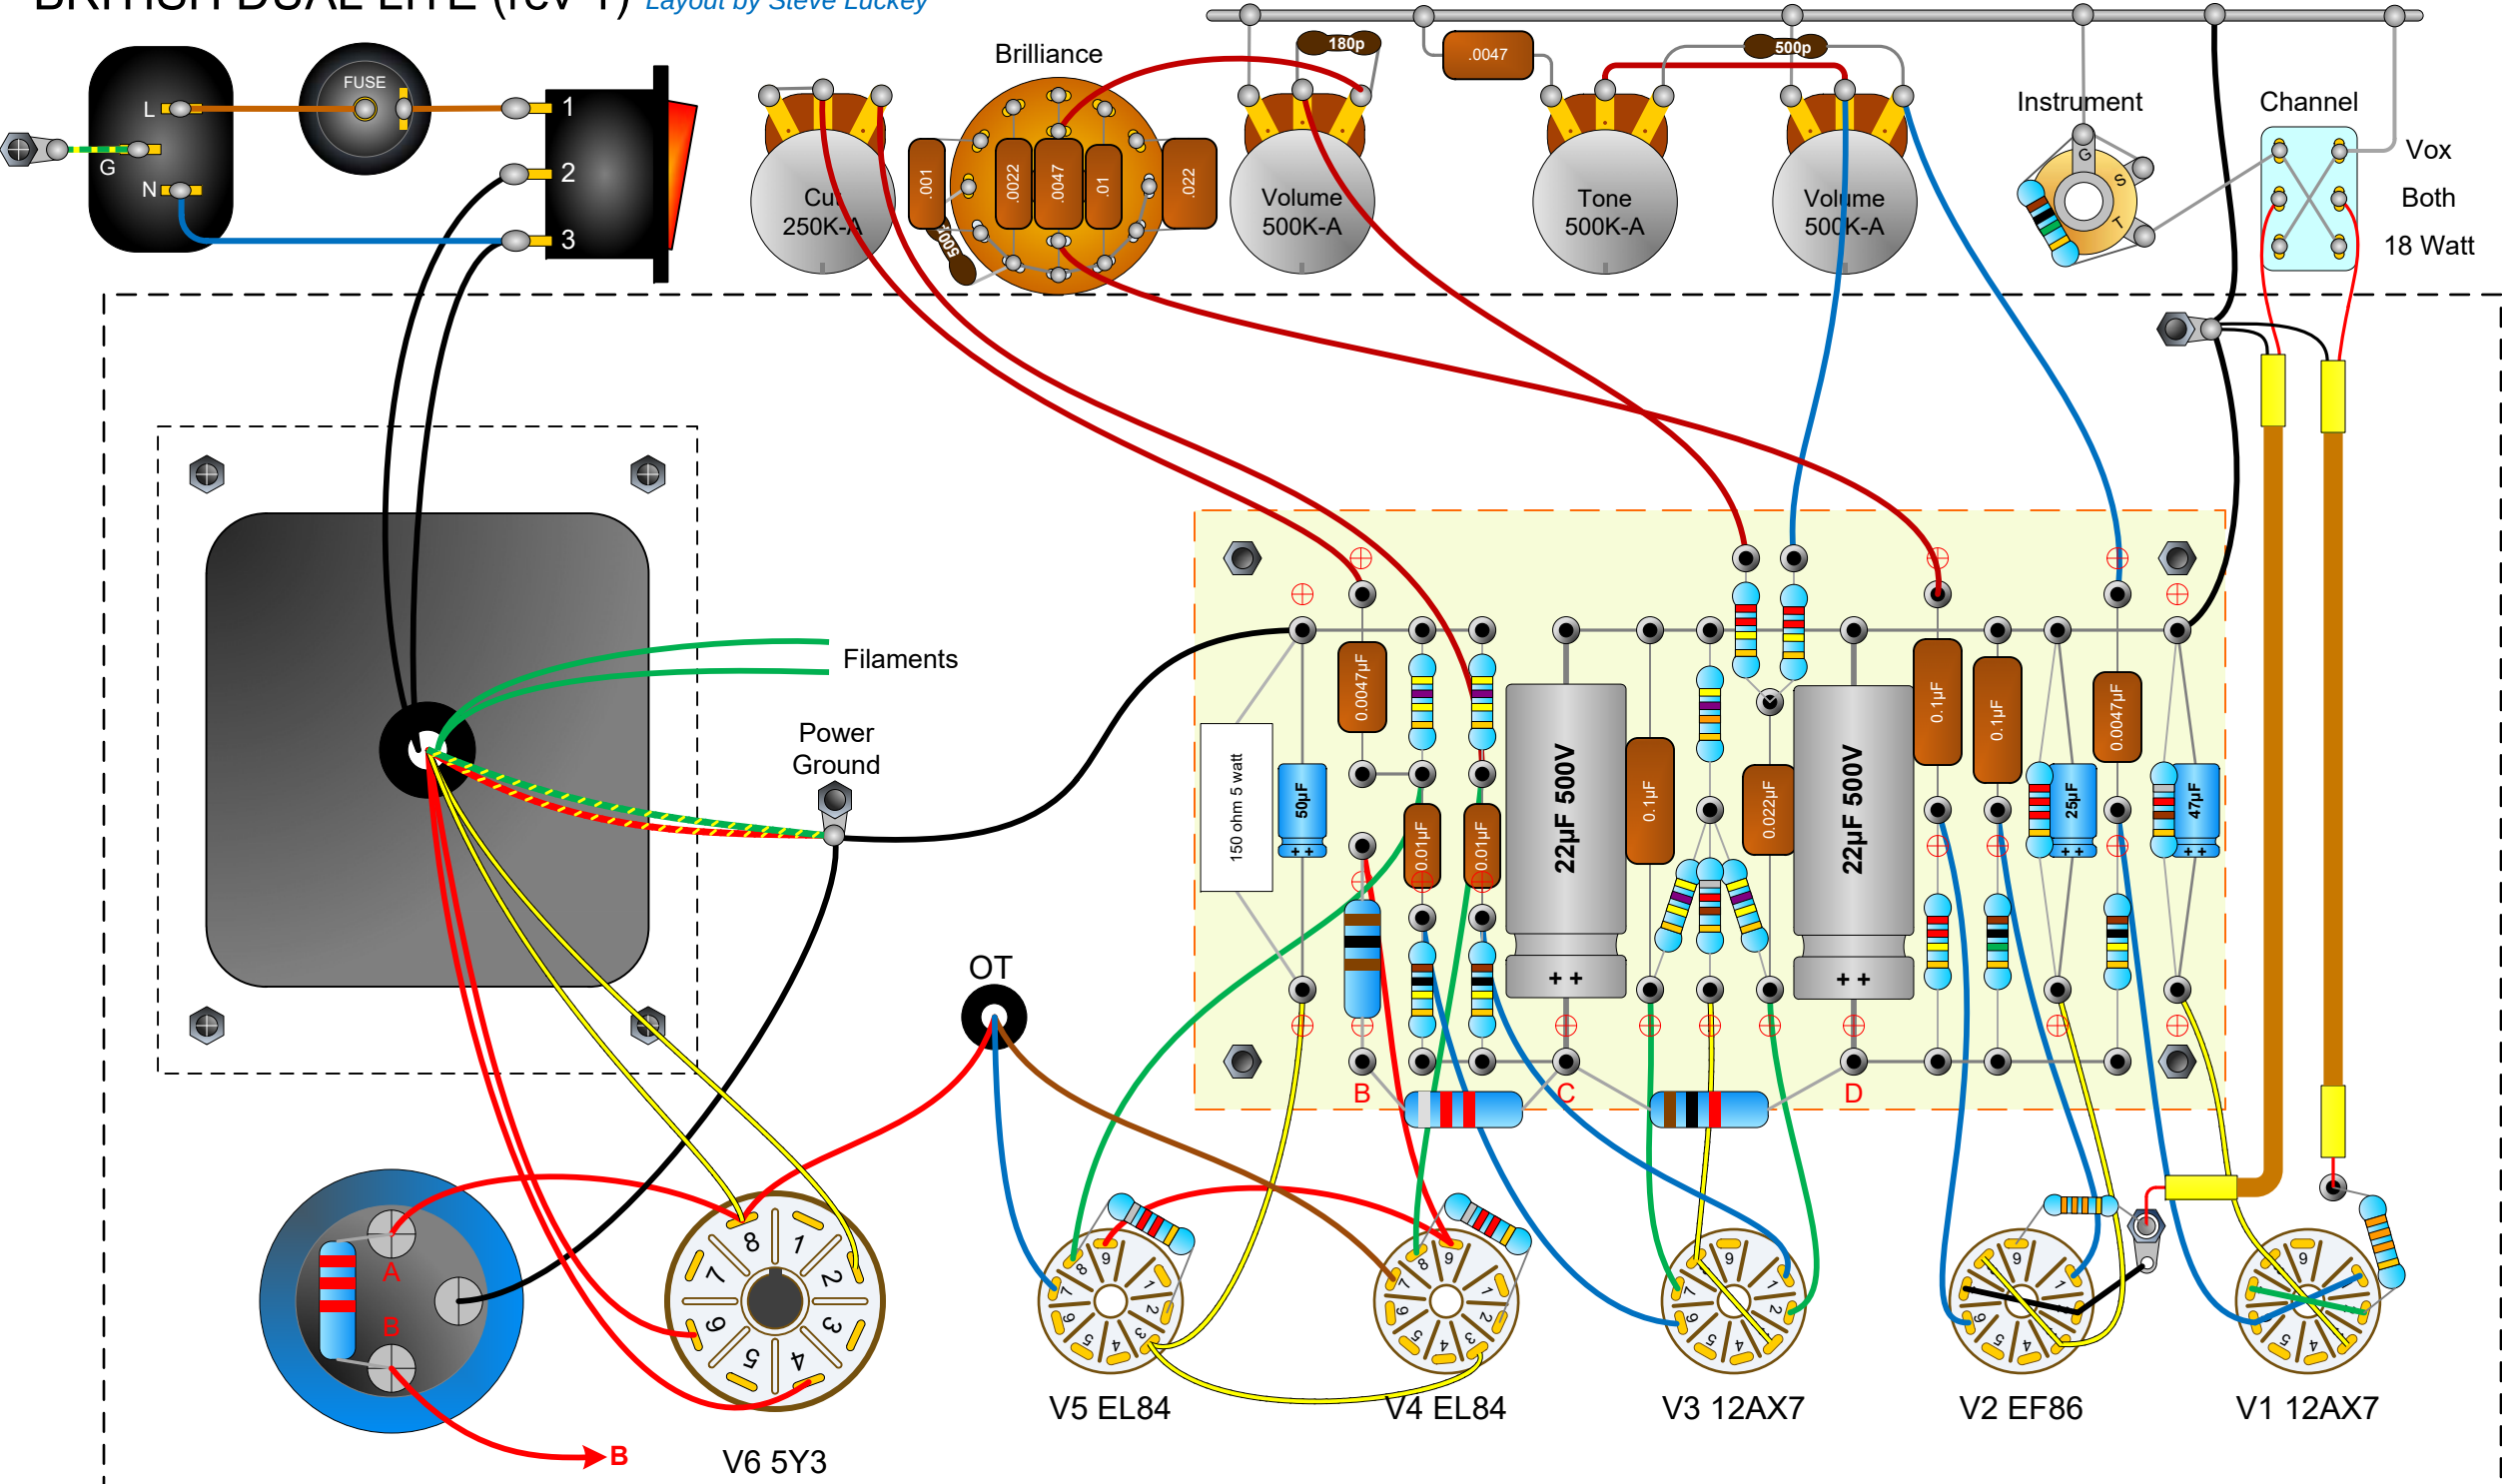

I don't have a Master Volume in this amp,
but if I wanted one, this is how I would do it.

PPIMV mod

1. Remove two 470K grid resistors.
2. Relocate .0047 μ F cap to pots.
3. Connect PPIMV ground to PA Gnd.
4. Use shielded cable if wires are long.

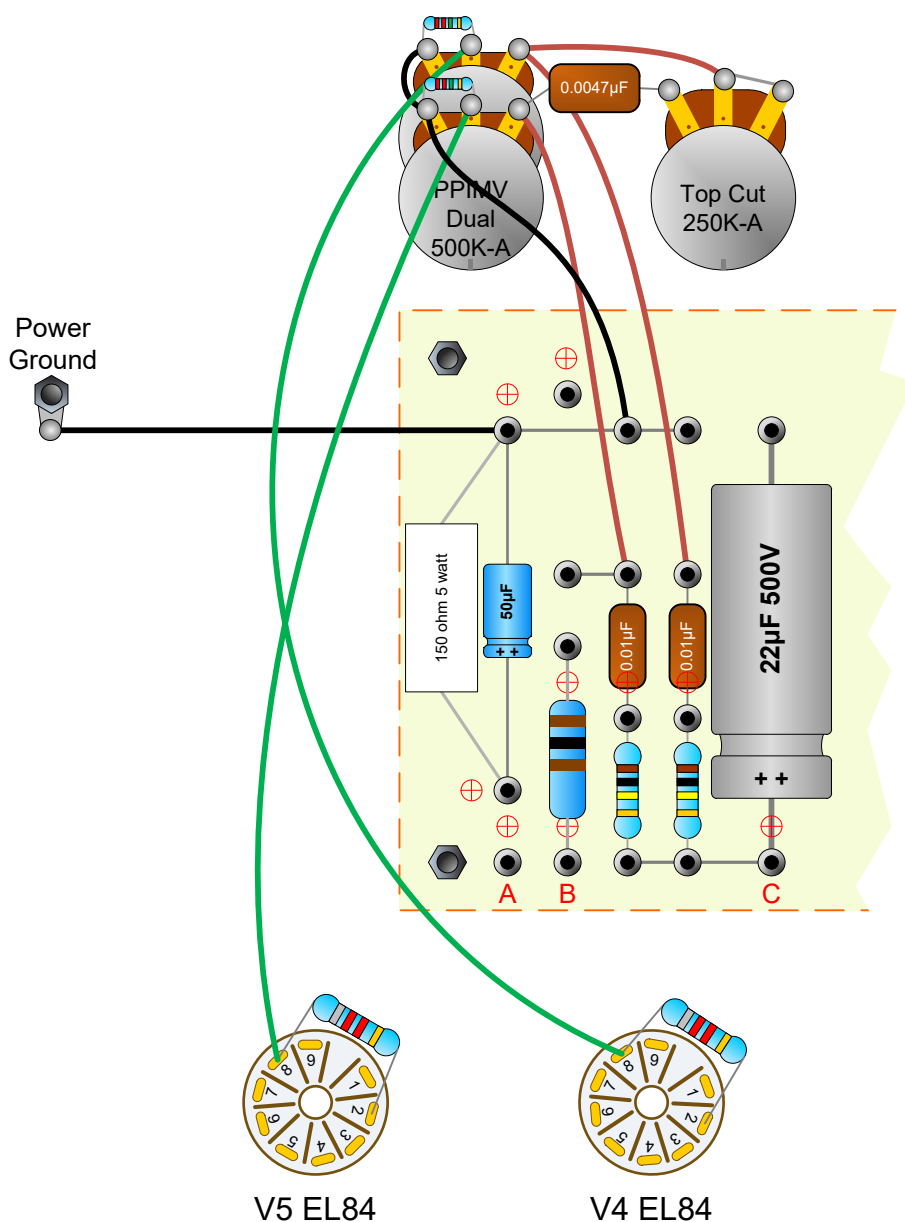

DRILL GUIDE

Revision 1

INSTRUCTIONS FOR PRINTING DRILL GUIDE

⊕ Turret --- drill size is 3/32"

⊕ Standoff – drill size to fit

⊕ Hole for wire pass thru – drill size to fit

----- Dashed lines are underboard jumpers

Board size is 3 1/8" X 5 3/8". Print this drill guide **FULL SIZE** on letter sized paper. Use one template as a drill guide. The other template will be used for installing jumpers. Measure the board length of the printout to verify it is 5 3/8". Attach to blank board using double sided carpet tape. Use a center punch to put a mark at the cross hairs of each turret, standoff, and hole. Use a 3/32" drill bit to drill all holes. Then enlarge holes as needed for screws and wire pass thru.

