


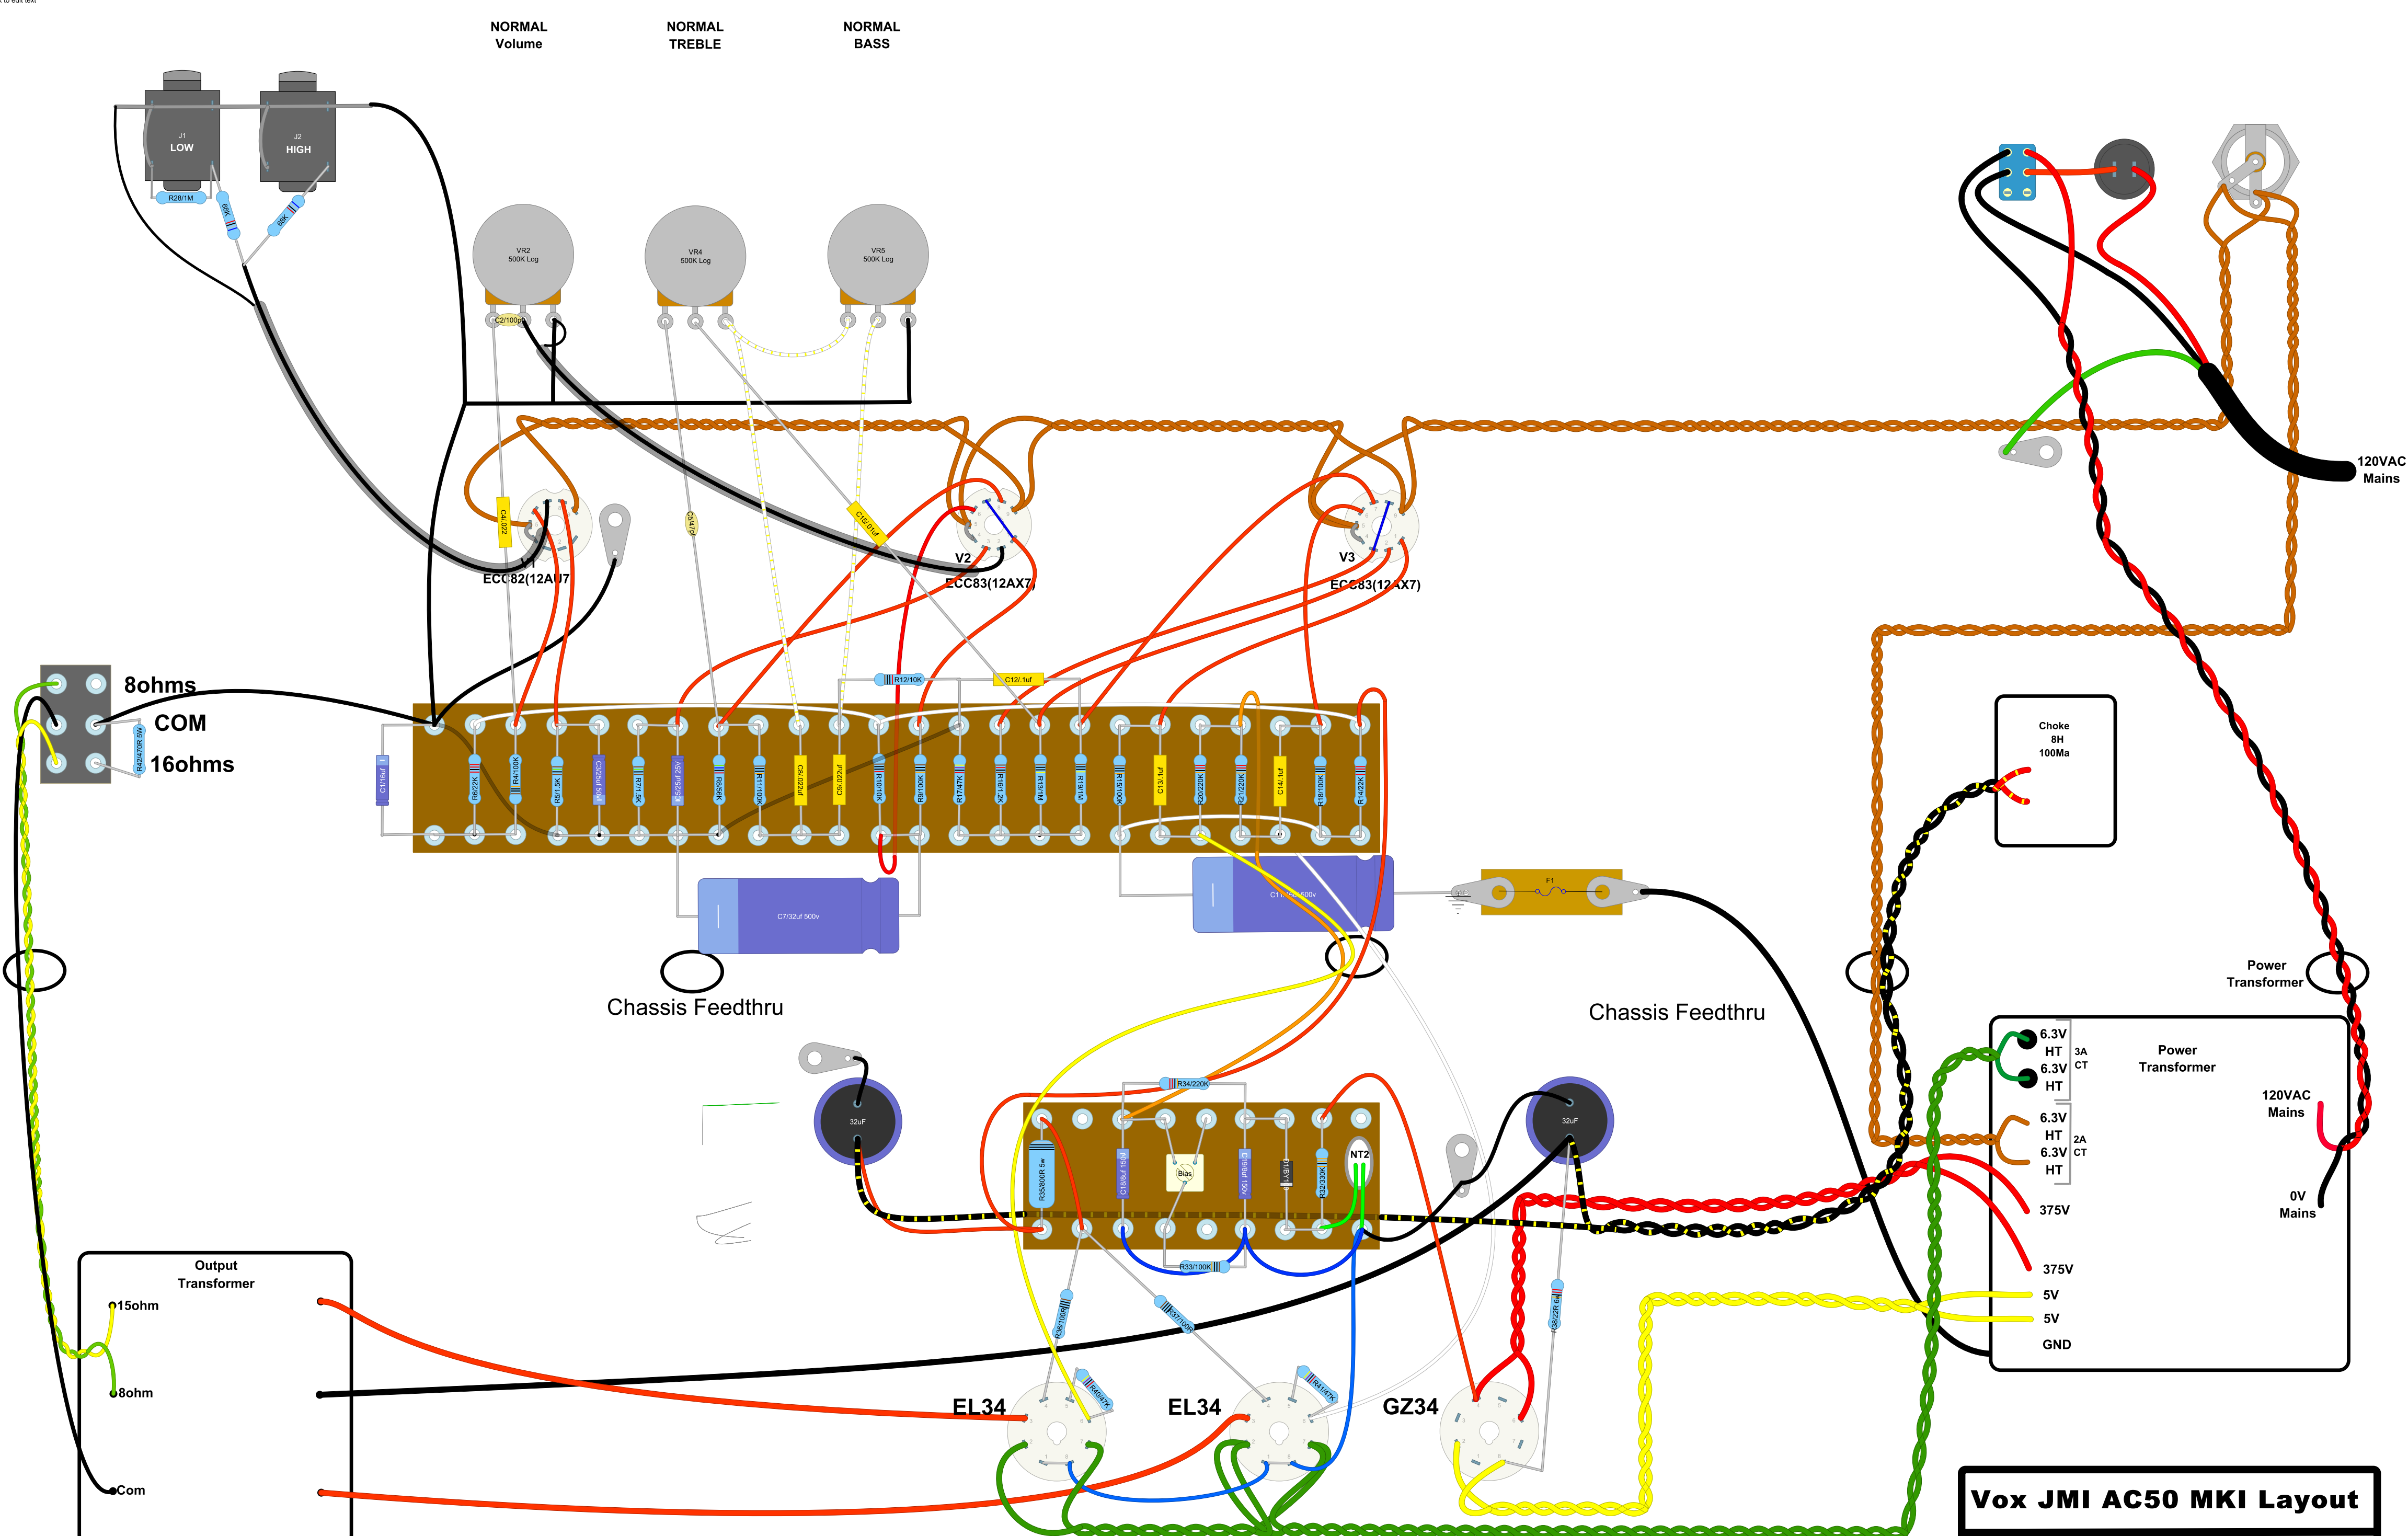

R3
1. Correct V1 Connections
2. Correct 16uF C11 Connection
3. Add Fuse Holder
4. Correct Wire colors to Original JMI
R2:
1. Corrects Power Supply Tagboard layout to MKI configuration with board mounted trimmer BIAS Pot