

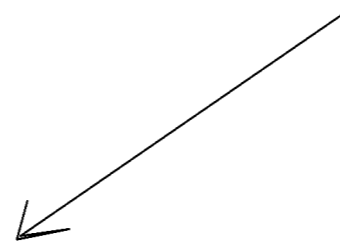
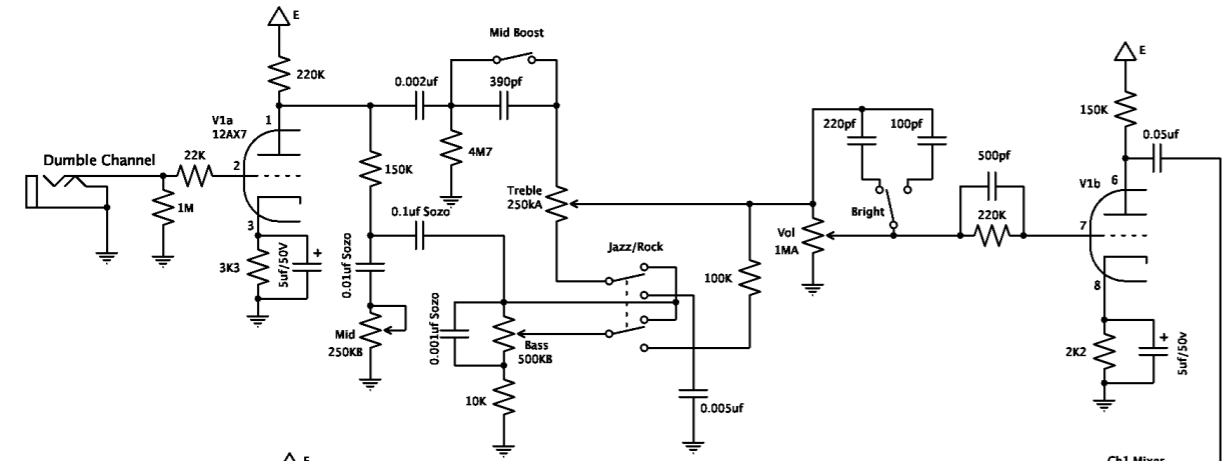





Robinett's Way of adding Reverb to both channels of an AB763

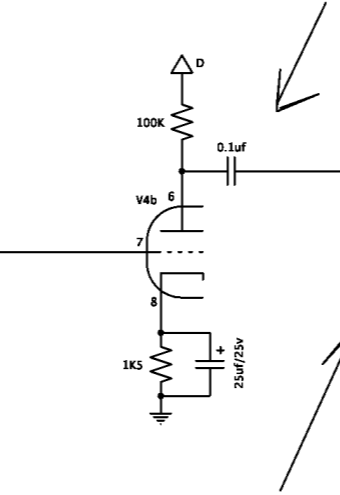

Reverb Recovery Gain Stage

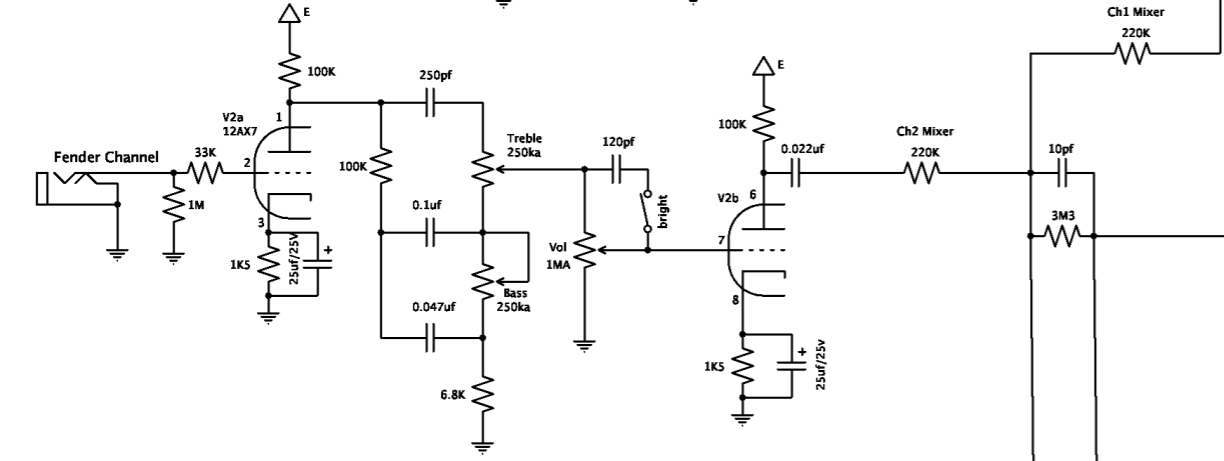

Master Volume Added

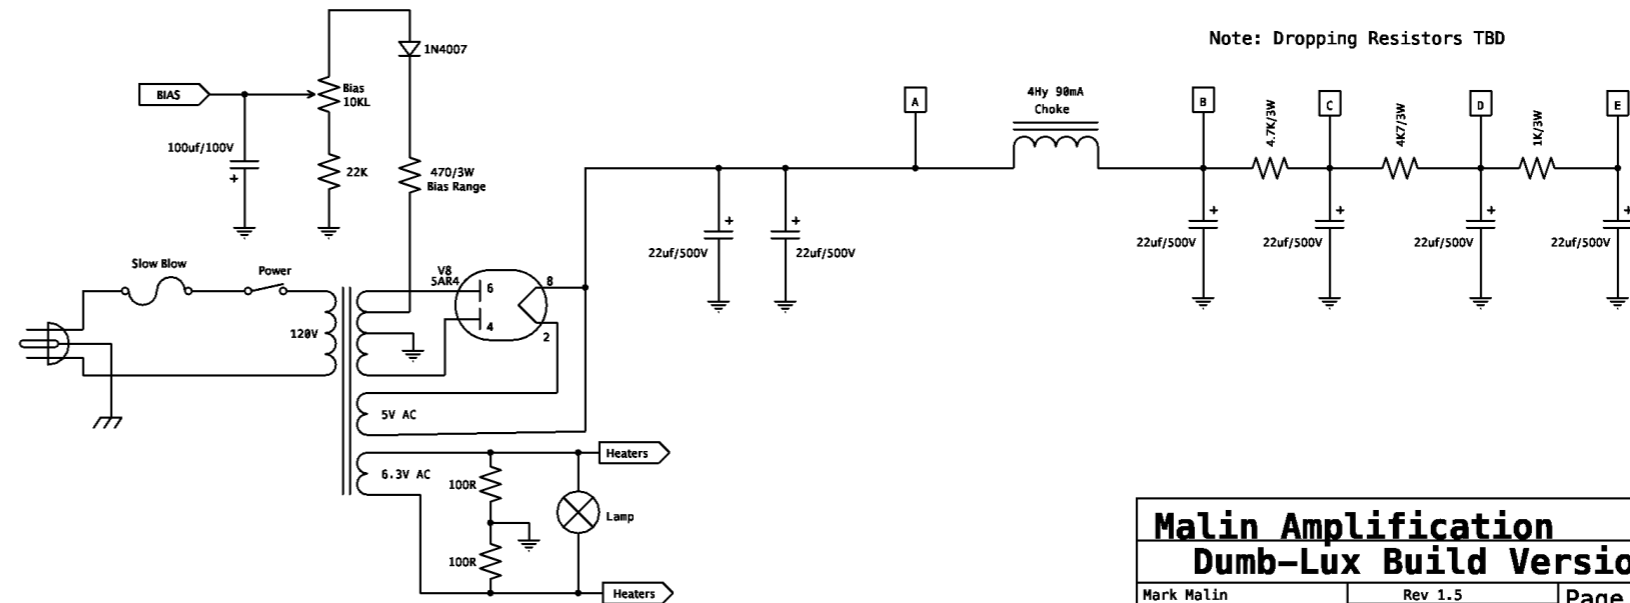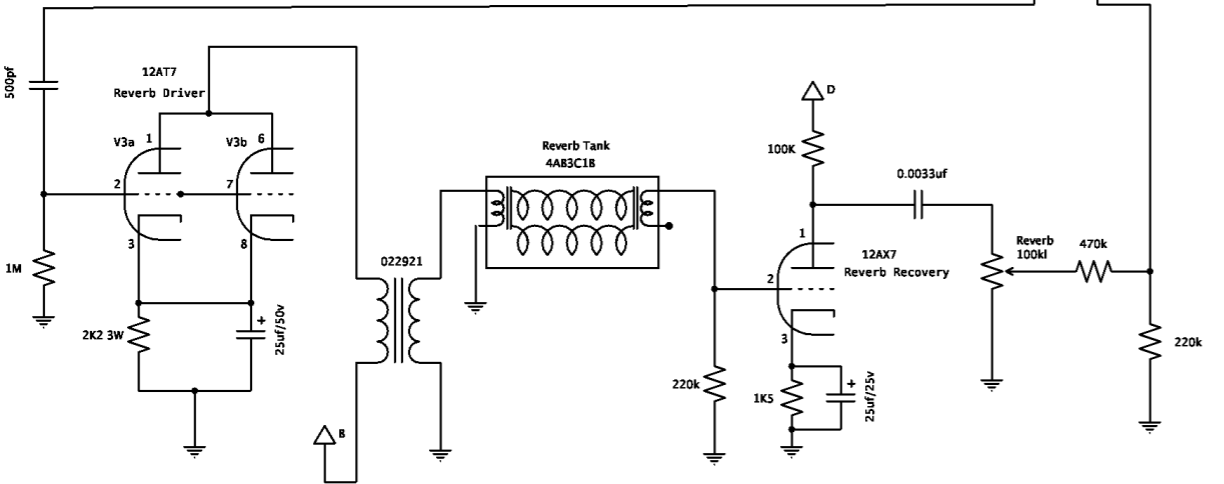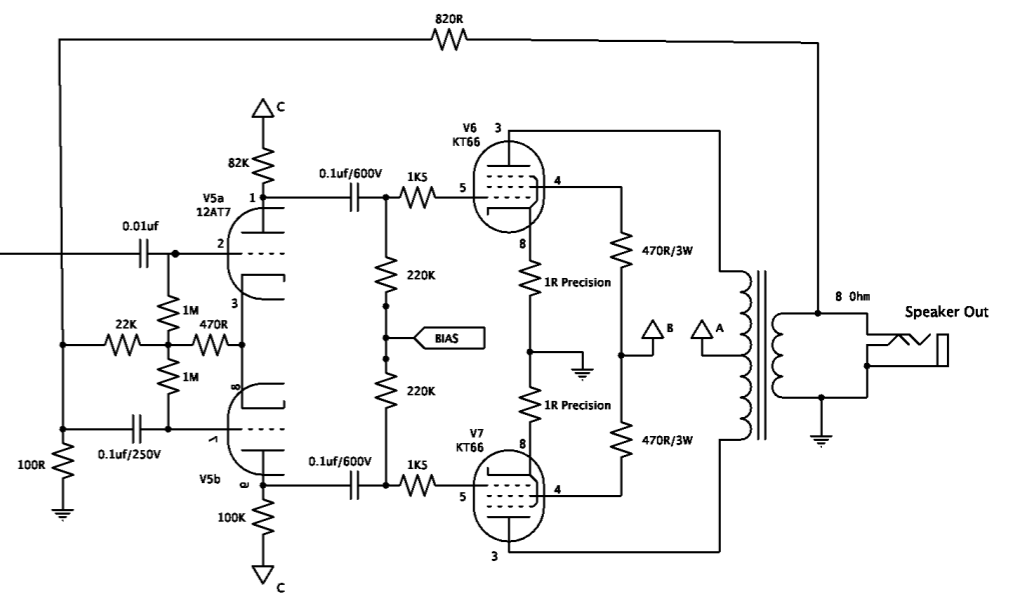

Note: Dropping Resistors TBD