


Joey Voltage SS effects loop. Board size 4" x 2"
 Will be installed in future.
 This layout shows passive FX loop wiring per original design

Wall wart for reverb unit.
 Plugged into convenience outlet

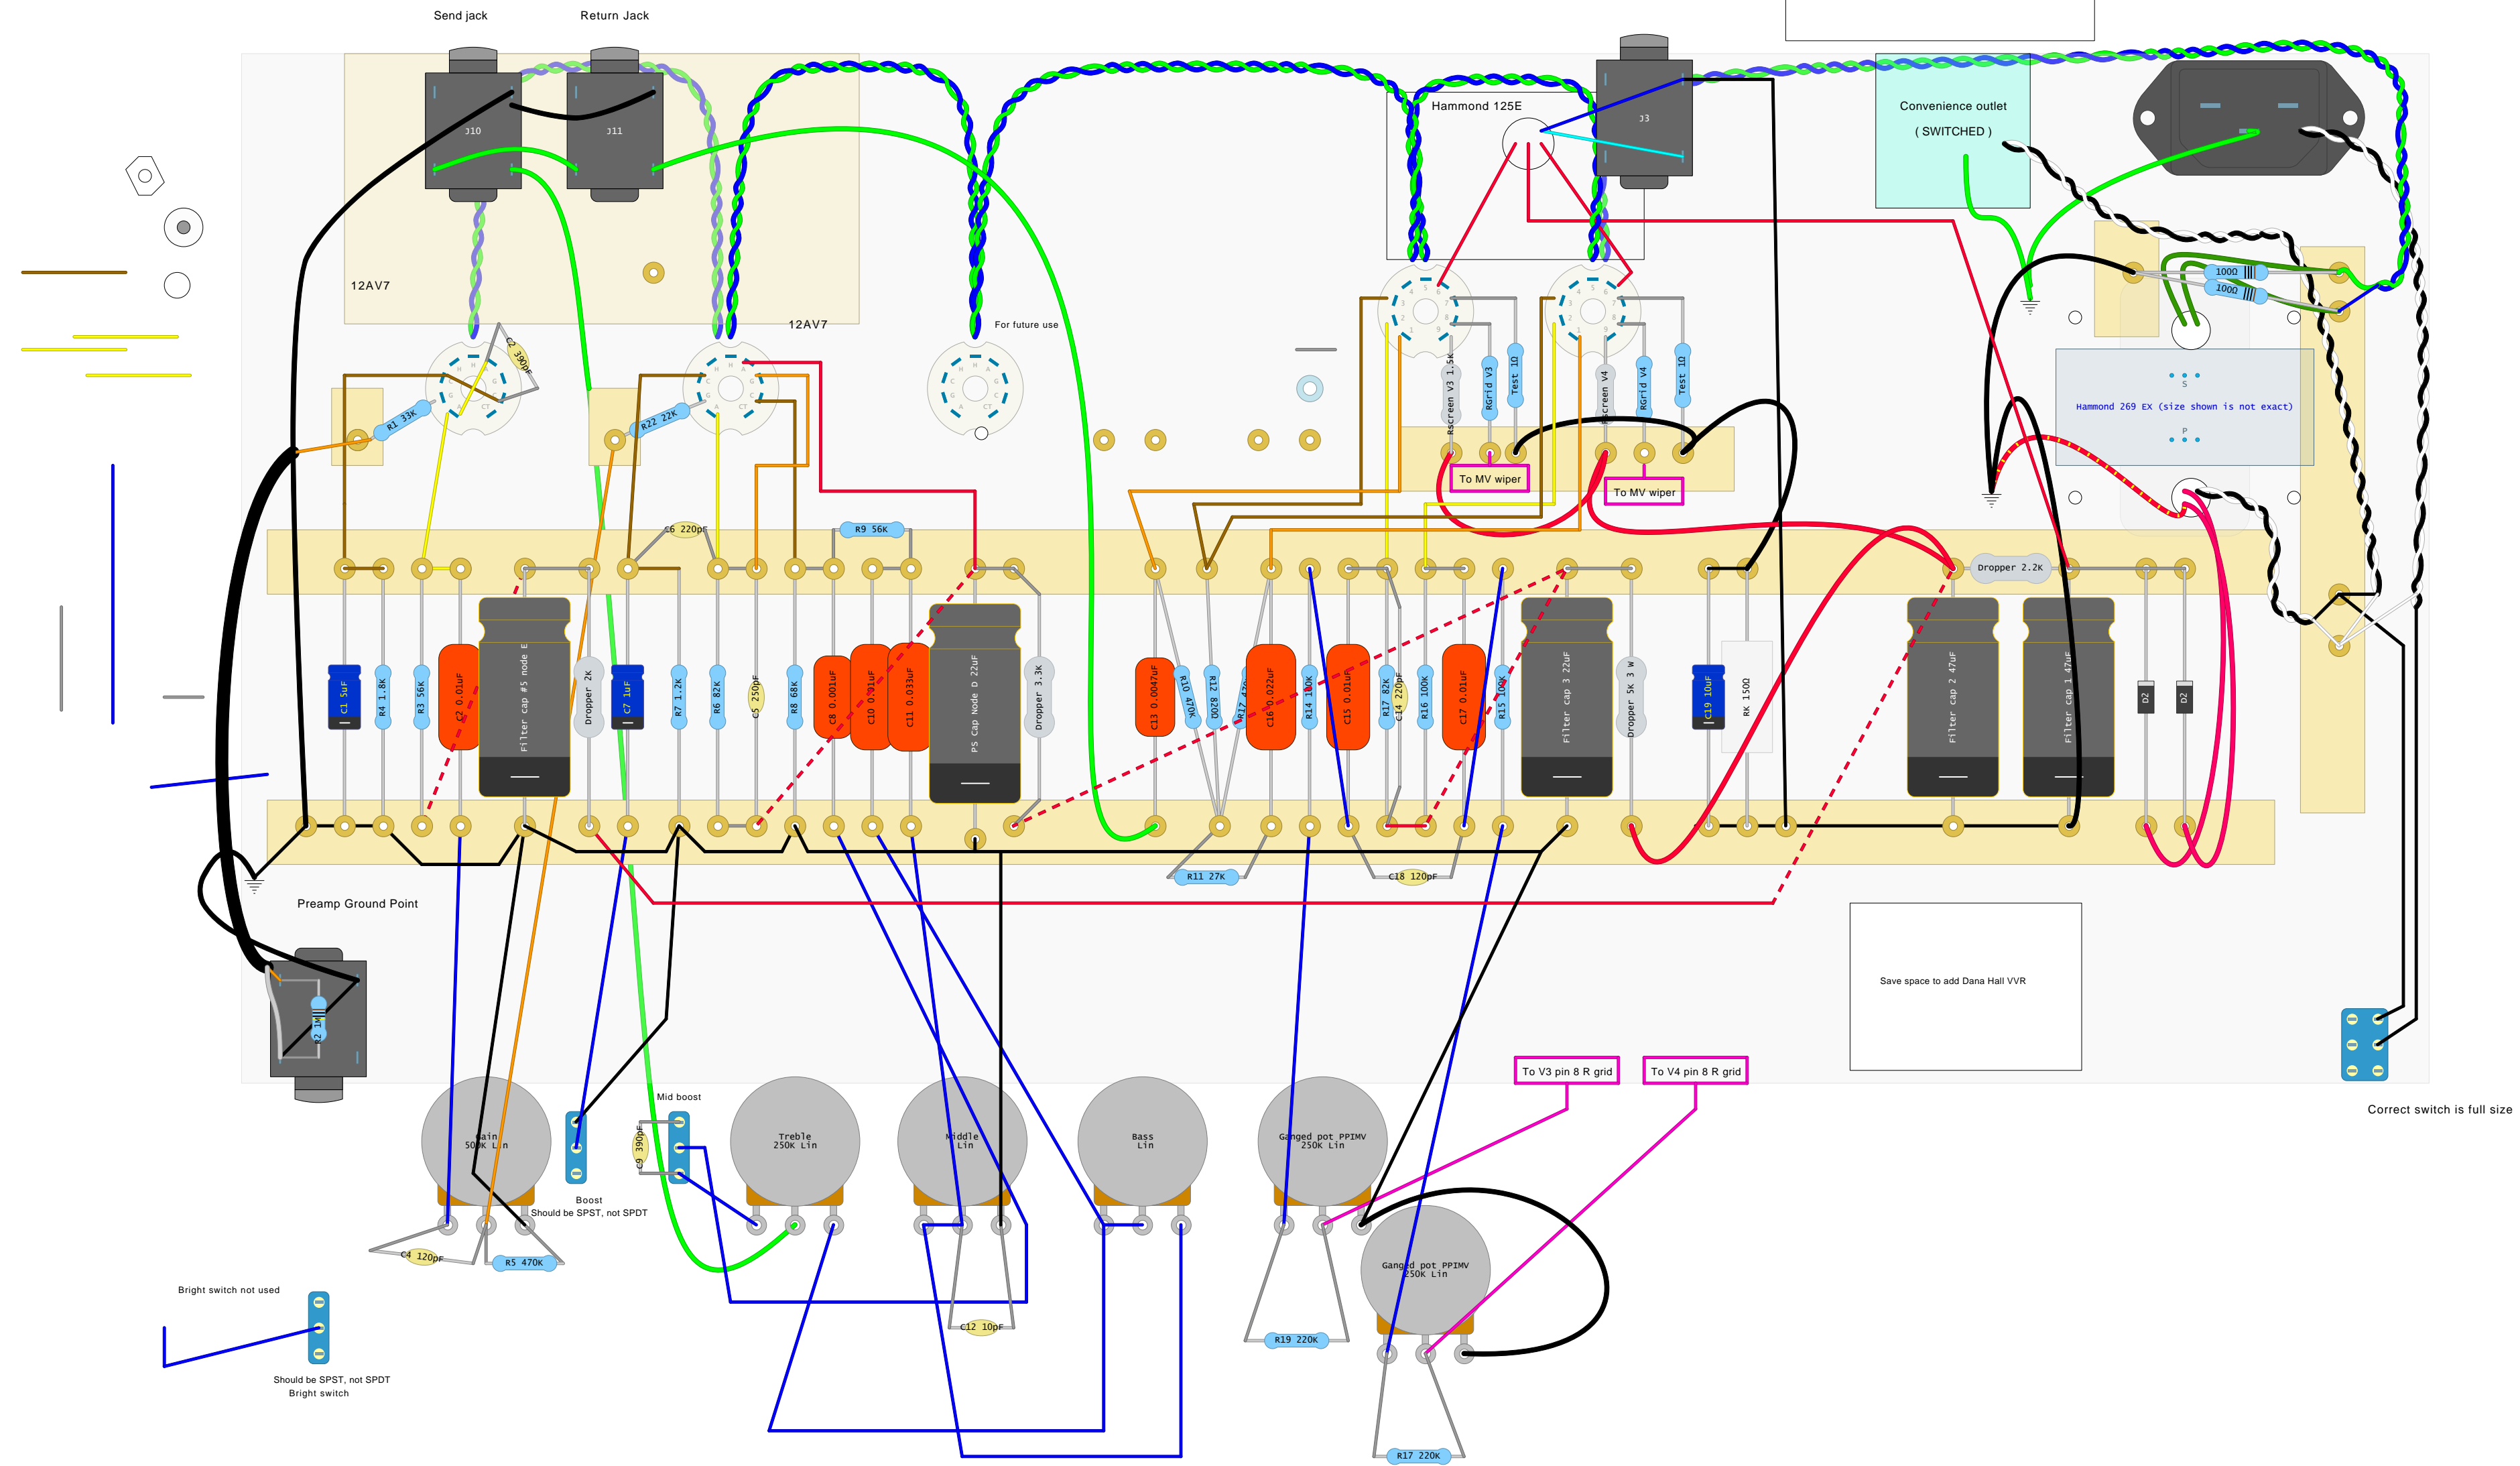

Save space to add Dana Hall VVR

Correct switch is full size

Bright switch not used
 Should be SPST, not SPDT
 Bright switch

To V3 pin 8 R grid
 To V4 pin 8 R grid

To MV wiper
 To MV wiper

For future use

Hammond 269 EX (size shown is not exact)

Send Jack

Return Jack

12AV7

12AV7

Hammond 125E

J3

Convenience outlet
 (SWITCHED)

Preamp Ground Point

50K Lin

Boost
 Should be SPST, not SPDT

Treble
 250K Lin

Middle
 Lin

Bass
 Lin

Ganged pot PP1MW
 250K Lin

R19 220K

R17 220K

R11 27K

C18 120pF

R17 25K

C13 0.0007uF

X01P 01A

0008 21A

R17 25K

R14 10K

C16 0.02uF

R17 25K

C15 0.01uF

R17 82K

C14 220pF

R16 100K

C17 0.01uF

R13 10K

R13 10K

Filter cap 3.2uF

Dropper 5K 3 W

RK 1500

Filter cap 2.4uF

Filter cap 1.4uF

D2

D2

Dropper 2.2K

Filter cap #5 node E

Dropper 2K

C7 47uF

R9 56K

C6 250pF

R8 68K

C8 0.001uF

R8 68K

C9 0.01uF

R7 1.2K

R7 1.2K

R6 82K

R6 82K

R5 470K

R5 470K

R4 1.8K

R4 1.8K

R3 36K

R3 36K

C1 1uF

C1 1uF

R2 33K

R2 33K

R2 22K

R2 22K

C3 330pF

C3 330pF

C2 330pF

C2 330pF

C1 330pF

C1 330pF