
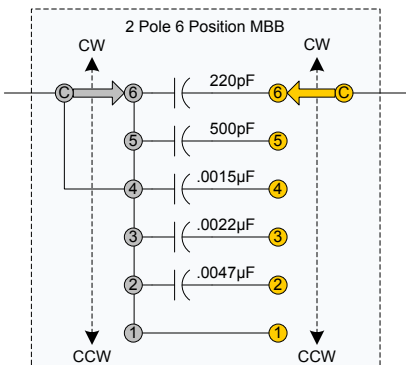



Vox AC-15 Modifications

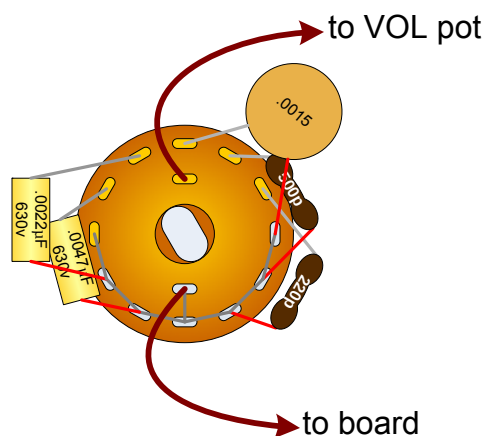

NOTE! All terminals for half the switch are jumpered together and just used as a tie point for the caps.

More Brilliance




Replace the Brilliance switch with this 2 pole 6 position switch for more tone options. The extreme positions of this switch still maintain the original tone options.

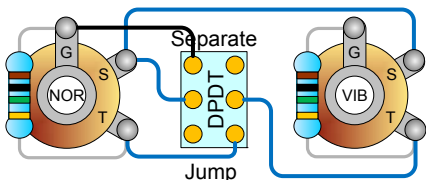

Jump! This mod allows you to easily jump the channels.

Delta Tremolo/Vibrato

Replace the original internal Depth preset and 3 position Speed switch with a front panel DEPTH pot (1M-A pot with push/pull switch) and a Speed pot for more control of the Trem/Vib effects. The switch is used to add another capacitor in parallel with one of the oscillator caps to lower the LFO frequency. The .022 μ F results in a very slow speed for some nice swampy Mississippi delta sounds.

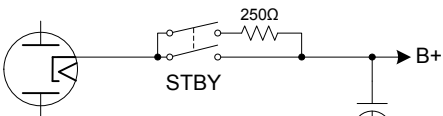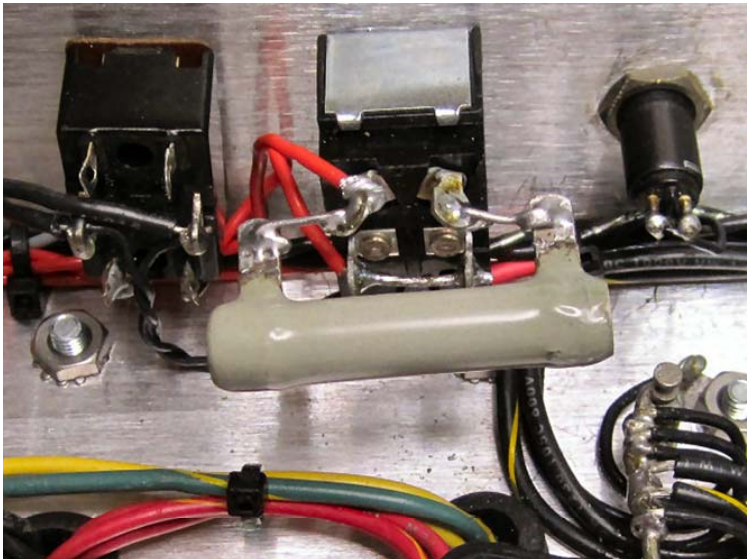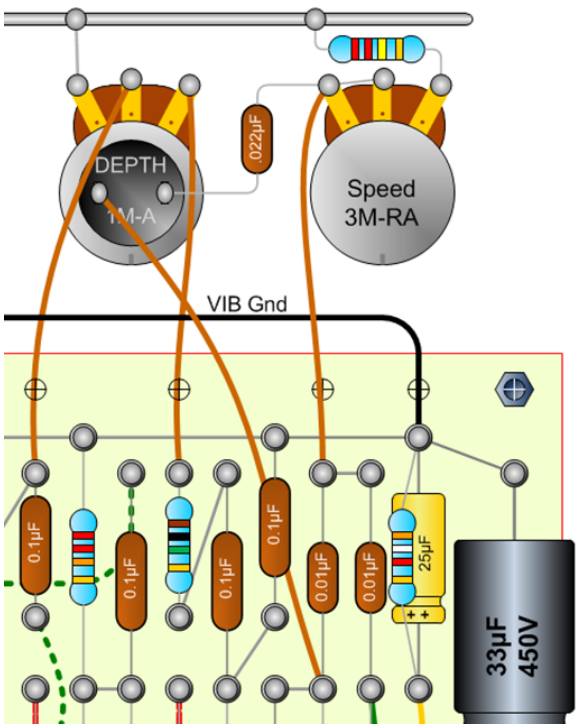

Double Pole/3 Position Switch
Off – Both poles are open
Center – Top pole is closed
On – Both poles are closed

Standby Plus! This 3 position Standby switch allows you to choose between full B+ and a lower B+.