


Suggested Layout

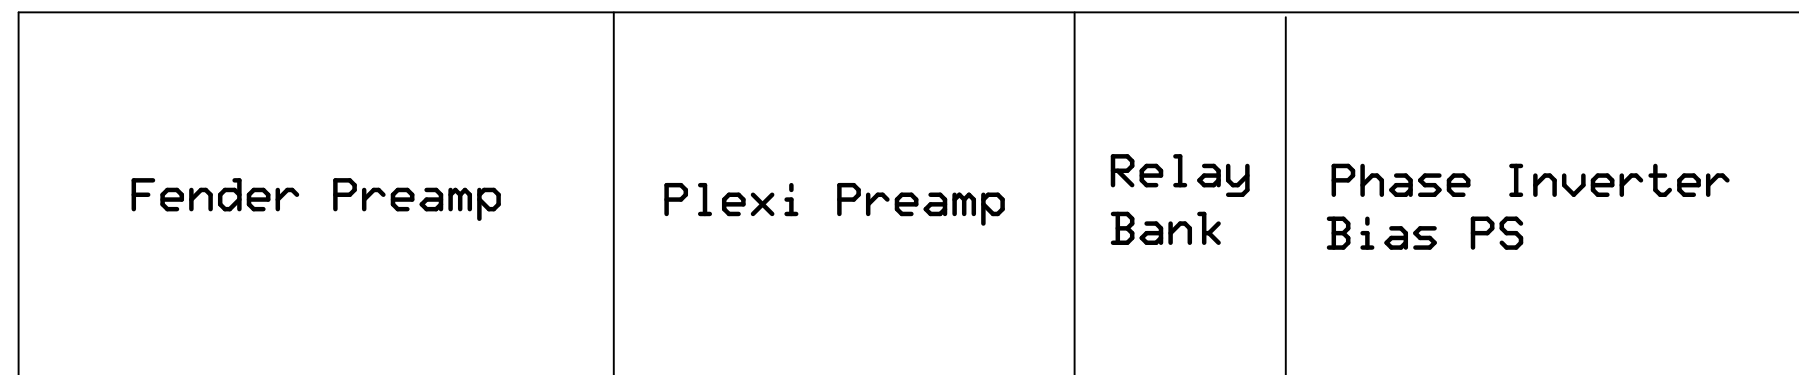

NOTES:

- Front panel channel select (SW3) overrides footswitch.
- Relay state shown de-energized: Fender Preamp/LTPI.
- All resistors 1W CF unless otherwise noted.
- C30 2 x 100uF 500V 1.375" Can
- C31 2 x 50uF 500V 1.375" Can
- C32 2 x 50uF 500V 1.375" Can
- C33 2 x 32uF 500V 1.375" Can
- T1 = Hammond 373EX
- T2 = Hammond 1760K
- T3 = Hoffman 022921
- L1 = Hammond 158Q
- D6 is power ON LED
- D11 is front panel channel LED